

Installation Instructions for Fluorescent Replacement LED Bulbs


1. Turn off the power to the machine and unplug it from the wall.
3. Remove the existing starter and replace with the green starter included with your light (Figure 1).

Figure 1



4. Remove the protective pin caps from each end of the LED (Figure 2).

Figure 2

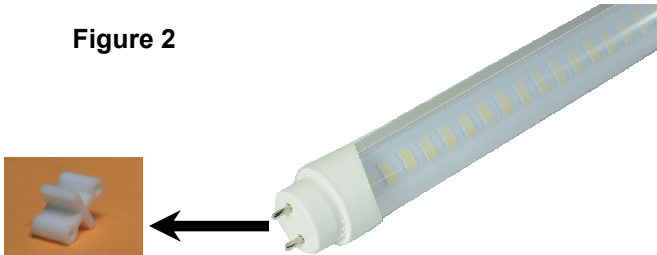

5. Hold each end of the LED bulb on the inner white ring between your index finger and thumb and insert the pins into the fixture as you would with a fluorescent bulb.

Note on adjusting the bulb: If you would like to adjust the angle of the light, first you remove the bulb from the machine. Then, pull out on the end of the bulb and rotate the bulb accordingly. It will click at each notch in the plastic end (Figure 3). If you need to start over, rotate the light back to the longest

Figure 3 First pull out on the end, then rotate

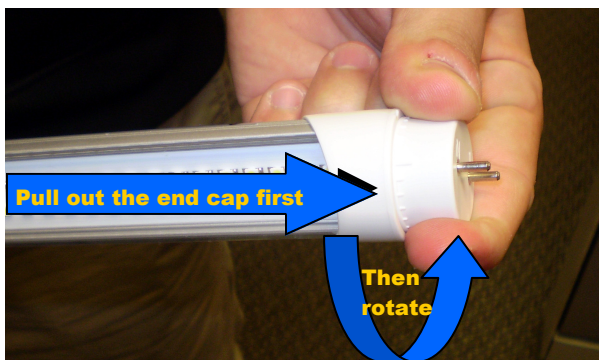


Figure 4 Line up long line with notch



6. Add the static cling label to the glass of your machine so customers know that you are using LED lighting.



VENDORS EXCHANGE
INTERNATIONAL
Innovation obsessed. Vending driven.

8700 Brookpark Road
Cleveland, OH 44129
Toll Free 800.321.2311
Toll Free Fax 800.249.1855
www.veii.com