


# **SNACKTRON 1<sup>TM</sup>**

## **PARTS MANUAL**

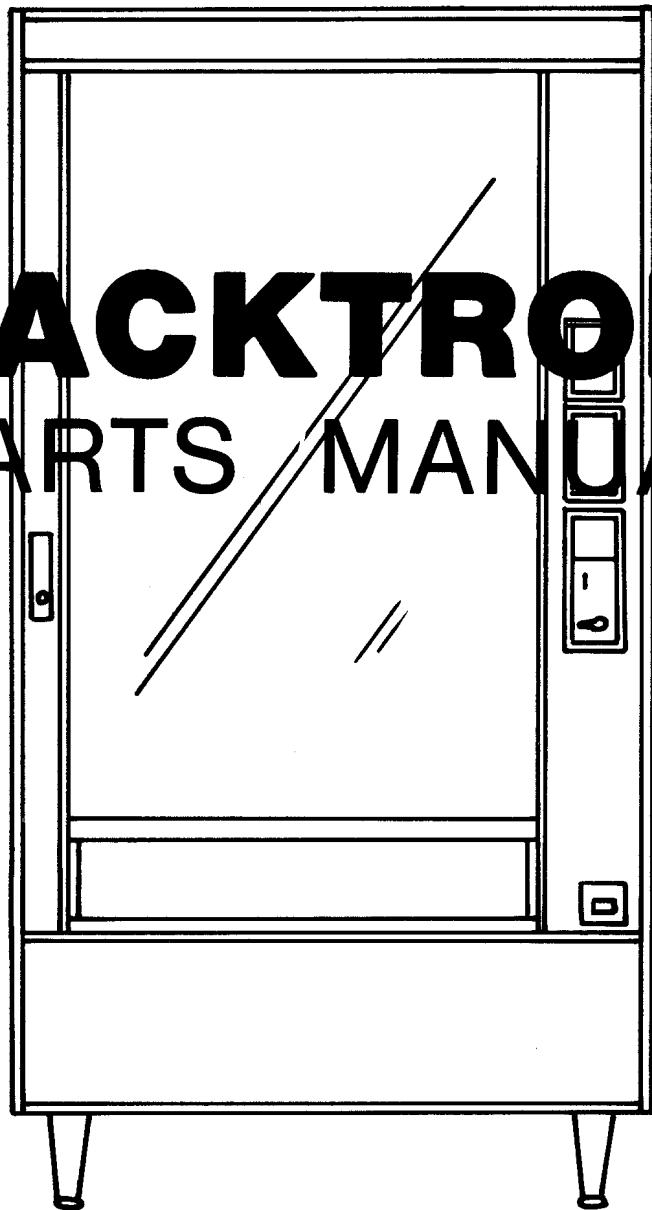

**CRANE®**

**NATIONAL VENDORS  
12955 ENTERPRISE WAY  
BRIDGETON, MO 63044**

## WARRANTY

The National Vendors Snacktron 1 Merchandiser is warranted for one (1) year against defective parts and workmanship. Any part or parts which are proved to be defective within one (1) year of the date of shipment will be replaced free of charge when the defective part is returned with transportation charges prepaid to the destination designated by the National Vendors' Parts Department.

This Warranty applies only to the original purchaser of the Merchandiser and is null and void if the Merchandiser is sold during the period of warranty.

This warranty is also null and void for all electrical components, wiring, or circuits, and/or for all mechanical parts or assemblies damaged as a result of operating the Merchandiser at other than 110-120 volts, 60 Hertz current.

No warranty is given or implied on incandescent lamps, neon lamps, fluorescent lamps, ballasts, or starters, and other expendable items.

Further, National Vendors is not responsible for any costs of service rendered, or repairs made, at other than National Vendors; or by anyone other than an authorized factory Service Representative of National Vendors; unless authorization to incur such expense has been given in writing by National Vendors prior to incurring such expense.

This Warranty is in lieu of all other warranties expressed or implied, including, without limitation, warranties of merchantability, and all other obligations or liabilities on National Vendors' part; and National Vendors neither assumes, nor authorizes any person to assume for it, any other obligation or liability in connection with the sale of said Equipment or any part thereof.

**NATIONAL VENDORS**  
A Division of Crane Co.  
5055 Natural Bridge  
St. Louis, Missouri 63115

This machine has been engineered to our own rigid safety and performance standards. It has earned a "Letter of Compliance" from NAMA indicating that it complies with sanitation and health guidelines recommended by the Automatic Merchandising Health-Industry Council (AMHIC) and it conforms with all other NAMA safety recommendations. In addition, the UL label signifies that its construction and design have been inspected and tested by Underwriter's Laboratories, Inc. and found to comply with their safety standards. UL inspectors also periodically examine production machines at the factory to assure continued compliance. Each electrical

part has been separately investigated by UL and found to be safe as used in this equipment. This machine has also been CSA certified and FCC verified. To retain the safety and performance built into this machine, it is important that installation and maintenance be conducted so as to not alter the construction, or wiring, and that replacement parts are as specified in the Parts Manual. Using the Set-Up Instructions and Parts Manual in your operation and maintenance work will protect your investment in this equipment. By following prescribed procedures, machine performance and safety will be preserved.

# TABLE OF CONTENTS

**SECTION I. THEORY OF OPERATION (unavailable at this printing)**

**SECTION II. TROUBLESHOOTING (unavailable at this printing)**

**SECTION III. CIRCUITRY**

**SECTION IV. ILLUSTRATED PARTS BREAKDOWN**

## LIST OF ILLUSTRATIONS

<b>Figure</b>		<b>Page</b>
3-1	Gum and Mint Wiring Diagram	3-1
3-2	Merchandiser Wiring Diagram	3-2
4-A	Flowchart	4-2
4-1	Snacktron 1" Merchandiser	4-3
4-2	Snack Tray Assembly	4-5
4-3	Candy Tray Assembly	4-7
4-4	Gum and Mint Assembly	4-9
4-5	Gum and Mint Motor Assembly	4-12
4-6	Cabinet Assembly	4-14
4-7	Cabinet Sidewall Assembly	4-18
4-8	Electrical Wiring Assembly	4-20
4-9	Channel and Receptacle Block Assembly	4-22
4-10	Controller PCB and Component Assembly	4-24
4-11	Fan Housing Assembly	4-27
4-12	Door Assembly (1 of 3)	4-28
4-12	Door Assembly (2 of 3)	4-29
4-12	Door Assembly (3 of 3)	4-30
4-13	Push Button Grid Assembly	4-37
4-14	Coin Receptacle Assembly	4-38
4-15	Delivery Pan Assembly	4-39
4-16	Upper Door Light Assembly	4-42
4-17	Base Plate Assembly	4-43

## **SNACKTRON 1**

### **SPECIFICATIONS**

**SIZE:** 72" (182.9 cm) high  
38" (96.5 cm) wide  
35-1/2" (90.2 cm) deep

**WEIGHT:** 640 lbs. (288 kg)

**POWER REQUIREMENTS:** 115 Volts 60 Hertz 3 Amps

**SELECTIONS - CAPACITIES:** 5 Selection Snack Tray - 67 items  
10 Selection Candy Tray - 220 items

The number of items is based on the suggested arrangement of the Snack and Candy spirals.

**OPTIONAL EQUIPMENT:** 5 Selection Vertical Gum and Mint

Base Plate Assembly - NU-GRAY; AWARD  
Data Retrieval  
Keylock Switch Assembly  
Van Lock  
Flex Ace Lock  
Exhaust Fan

**OPTIONAL COIN UNITS:** MARS ELECTRONIC" Model MC5000 drop shipped  
COIN ACCEPTORS Model C300-9404-977 drop shipped

N A T I O N A L   V E N D O R S



T E C H N I T R O N  
ELECTRONICS

S N A C K T R O N   1 & 2

## TECHNITRON SYSTEMS

### The Matrix

Most microcomputer systems use a concept known as the Matrix to control (or be controlled by) various peripheral devices. Keypads, displays, and even the tray system in the Snacktron are all examples of matrixed devices.

Basically, a matrix can be pictured as a grid with vertical and horizontal lines that intersect in a symmetrical pattern. The points where the lines cross represent an input (switches) or an output (motor, digit in a display, etc.) to the microcomputer. The advantage to using a matrix system is the ability for the microcomputer to use a large number of devices with a relatively small number of control lines. For instance, the Snacktron can operate as many as 65 different motors with only 18 control lines.

A matrix can be thought of as a chart or table. A number of rows and columns are used. To find what we want, we select one row and one column. Where these two lines meet we find the desired result. In the example below, a 4 x 4 matrix is used (four rows by four columns). If we select Column 3 and Row 2 and follow them until they intersect, the result is "BROWN". Notice that we have 16 colors but only 8 lines (4 rows and 4 columns).

By using this same principle, the microcomputer can use two signals (one Row and one Column) to turn on a display, operate a motor, or read a switch.

		Columns			
		1	2	3	4
ROWS	1	GRAY	VIOLET	TAN	AQUA
	2	YELLOW	RED	BROWN	BLACK
	3	BLUE	GREEN	ORANGE	PURPLE
	4	WHITE	PINK	GOLD	SILVER

### Selection System


All Technitron Merchandisers use a switch matrix to determine selections. The Snacktron' Selection Panel is made up of 21 buttons, controlled by 10 lines (7 columns and 3 rows. The Tele-Touch' Panel used on the Hottron, Coldtron, and Foodtron merchandisers have 12 buttons controlled by 7 lines (4 columns and 3 rows). Both panels work on the same principle.

## Snacktron Theory of Operation

The Snacktron is a glass front spiral snack vendor that delivers packaged snacks, candy, gum, and mints to customers. The unit can have up to 6 separate trays, with either 5 snack or 10 candy selections per tray (4 snack or 8 candy on the Snacktron 2). An optional-Gum & Mint unit is available on the Snacktron 1.

Look at the block diagram for the Snacktron. A single Controller PC board is used to handle all functions. A Coin Mech. Interface Board is used to operate the coin changer and bill validator. Input signals are sent to the Controller PC board when money is deposited and output signals are sent to the changer when coins are to be paid out.

# SNACKTRON

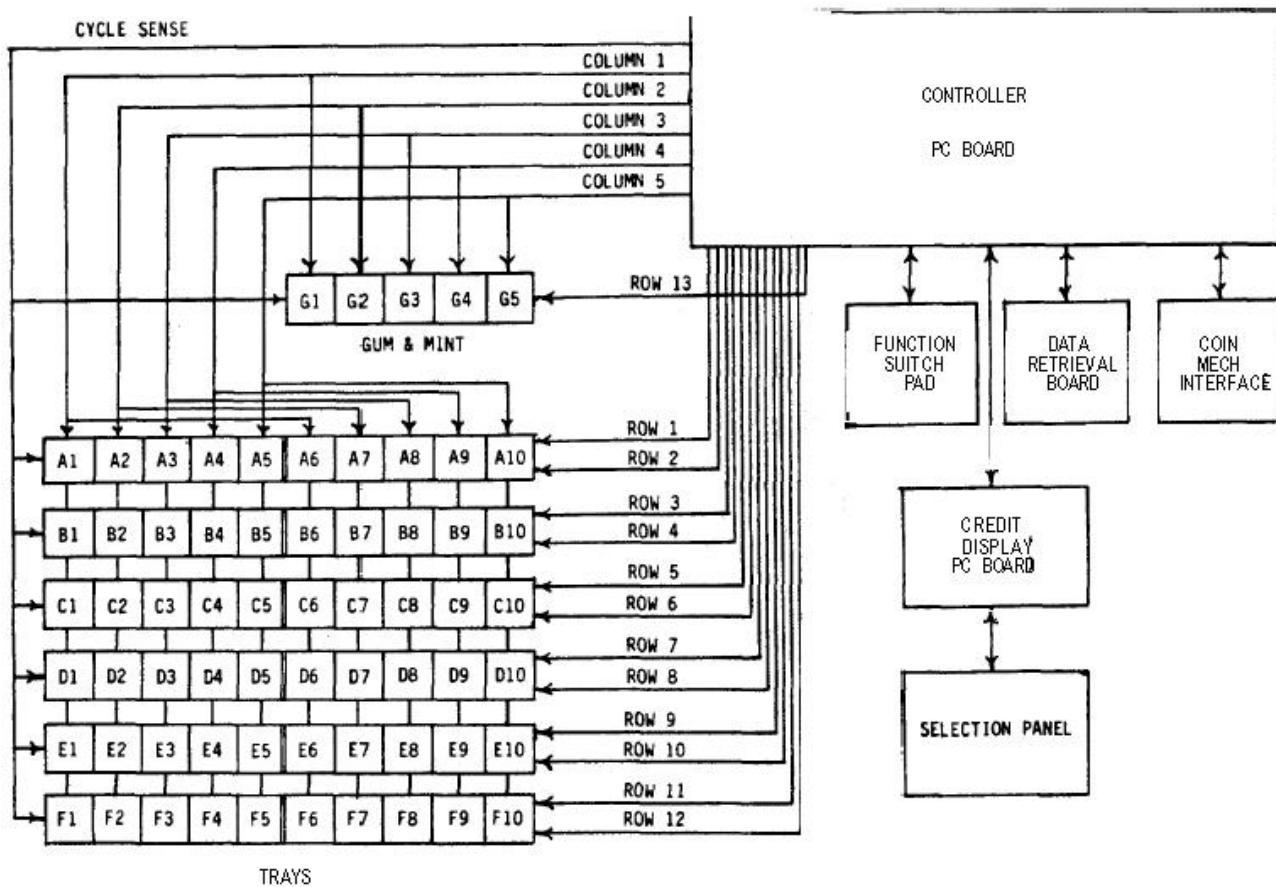


A matrixed Function Switch Pad is used to allow the operator to set prices, retrieve data totals, and perform diagnostic checks. The Data retrieval Board is an option that allows operators that use either the Mars or CA Data Systems to extract data totals using hand-held interrogators.

The Selection Panel and the Credit Display PC Board are connected together, with a single harness for both units going to the Controller PC Board.

A matrix system is used to operate the 24 VDC tray motors. 5 Column lines supply the 12 VDC while 12 Row lines provide the DC ground needed for the motors to run. A 13th Row line is used to operate the Gum & Mint unit. Each Row line controls 5 motors. Each tray position has 2 Row lines. For example, the "A" tray has Row 1 and Row 2. A snack tray will use only the odd numbered Row line for that tray position, while candy trays will use both lines.

To operate a motor, one Column line and one Row line will be active. The motor at the point where these lines meet will then run. For example, to vend "D4", Column 4 will be high and Row 7 will be at DC ground. All other lines will be disabled, so only D4 will run. Note how the same Column lines are used on both sides of a candy tray. In our example, if Column 4 is kept high but Row 8 is taken to DC ground instead of Row 7, "D9" will now vend.

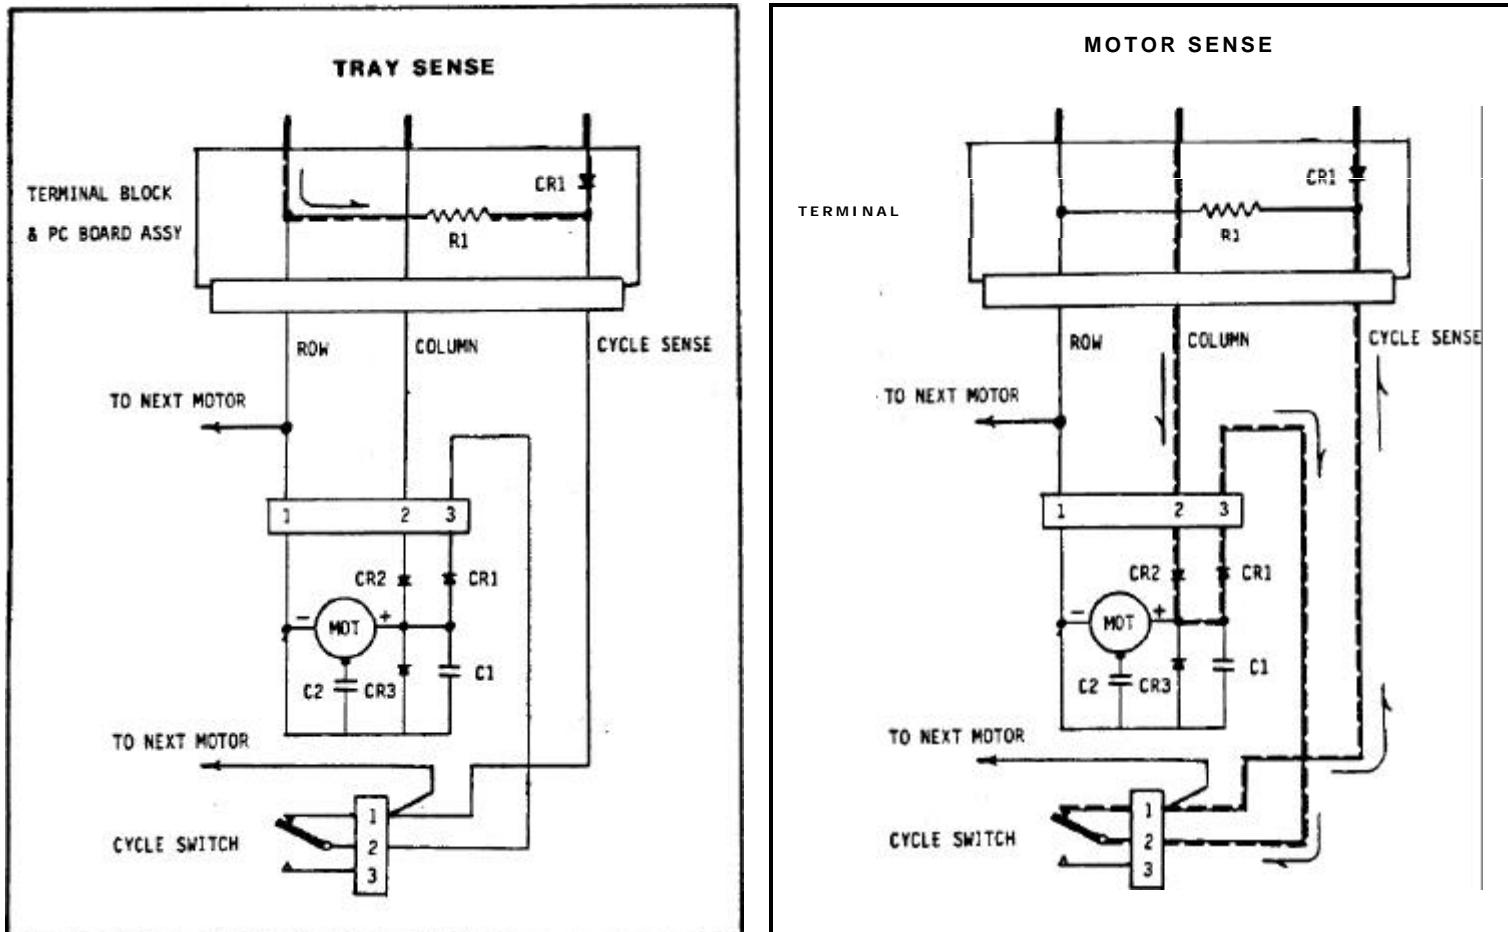


A Cycle Sense Line is used to determine the presence of a tray, whether it is a candy or snack tray, and if each motor is in its home position. Note the diagram SHOWING THE Tray Sense cycle. When the Snacktron first powers up, the Controller PC Board will send a low signal to each Row line, one at a time. If a tray is present, current will flow through the diode and resistor on the Terminal Block and PC Board Assembly and back on the Cycle Sense Line. If there is no current flow, the tray is not sensed and the microcomputer will disable those selections. If an odd numbered Row line indicates that a tray is present, this process is repeated with the corresponding even numbered Row line to determine if the tray is a snack or candy tray.


Once the trays have been verified, the microcomputer will then check each motor. Note the diagram showing the Motor Sense cycle. A signal is sent on the Column line, through diodes CR2 and CR1 on the motor, through the Cycle Switch, and on to CRI on the Terminal Block and PC Board Assembly. The diode becomes reverse-biased and the Cycle Sense Line shows that the motor is home. If the diode does not become reverse-biased, the microcomputer senses that the motor is not home and will run it to return it to the home position. If this fails to bring the motor home, the microcomputer will disable that selection and record it for the diagnostic check. This process is then repeated for each motor in the machine.

During a vend, the Coin Interface Board passes information between the Controller PC Board and the changer or bill validator. Once credit is established, the amount is shown on the Credit Display. When the customer presses the buttons on the Selection Panel, the microcomputer determines which selection was requested, checks to see if it is a valid selection (from the tray and motor sense cycles), and then matches it against the price of the item. If there is enough credit, 24 VDC is sent on the appropriate Column line and DC ground on the Row line in to run the motor. When the Cycle Sense Line shows that the motor is home, the vend is complete and any change due is paid to the customer. The Snacktron then returns to standby and waits for the next vend.

## SELECTION PANEL

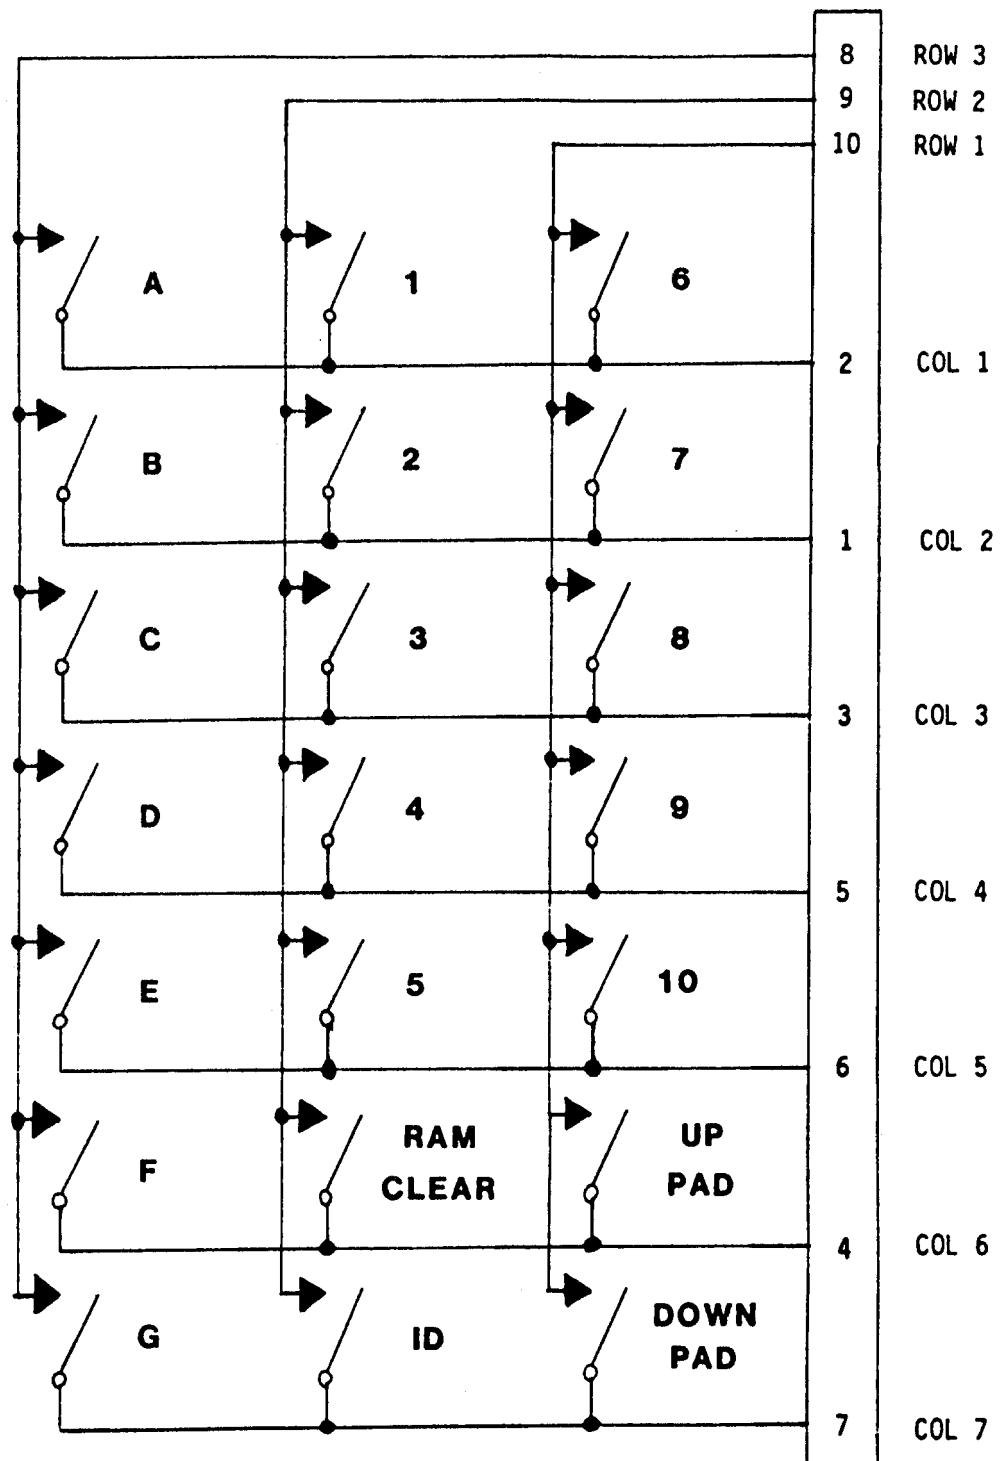

## TELE - TOUCH PANEL

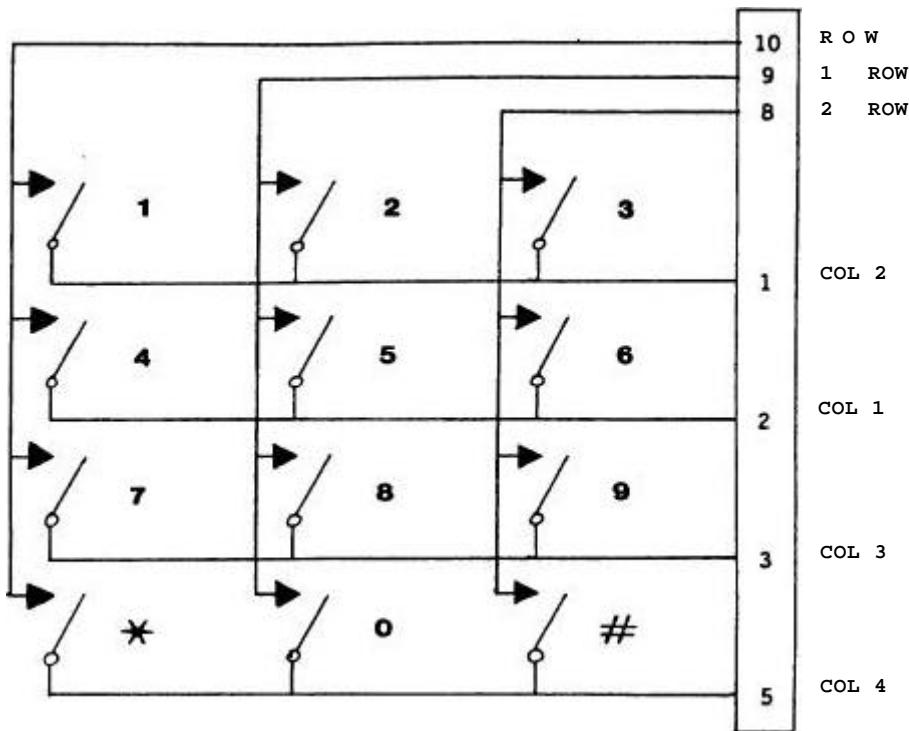


Each Column line is fed a signal from the control board. These lines are strobed so that when Column 1 is on, all other Column lines are off. When Column 1 turns off, Column 2 turns on, and so on through each of the Column lines. When the last Column line turns off, Column 1 turns on again and the process is repeated.

The three Row lines are used to detect when a button has been pressed. The microcomputer sees the strobed signal from a Column line being fed back through the Row line and determines which button has been pressed. For example, if the Control Board in the Snacktron saw the Column 3 strobe on the Row 2 line, it would know that the '3' button had been pressed. On units using the Tele-Touch" panel, the Column 3 strobe on Row 2 would mean that the 08" button had been pressed.

## Display System

The Technitron Merchandisers all utilize a fluorescent tube display to communicate with customers. A matrix system is used by the display to determine what will light up and when.

The fluorescent display contains 10 digits, each with 15 segments. Combinations of segments are turned on to represent a number or letter. Each of these segments in the display is an anode that is coated with fluorescent materials that give off light when hit by electrons. There is one common cathode along the face of the tube that is easily seen as a set of fine wires. A constant voltage is applied to this cathode to keep it warm enough to give off electrons easily, but not hot enough to glow.

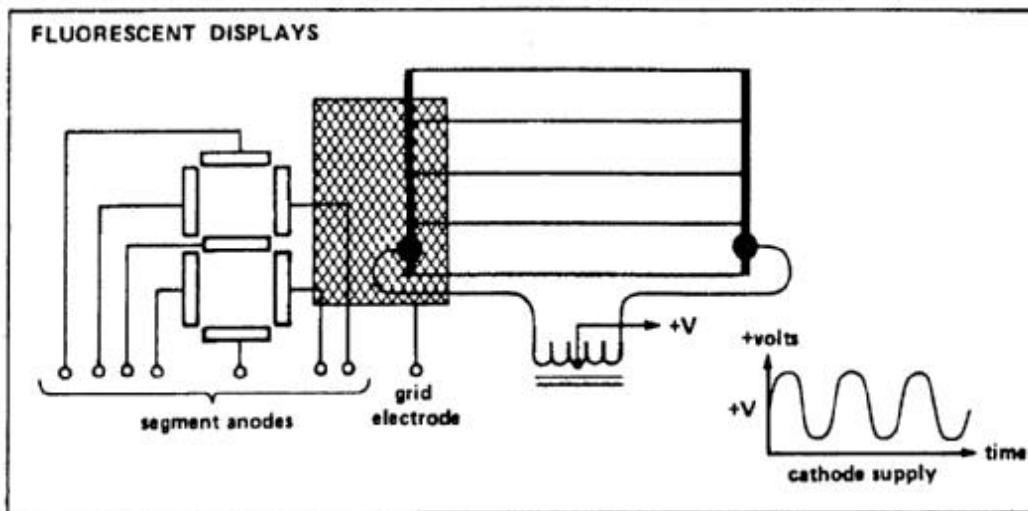


All 15 segment anodes in each digit are wired in parallel across the entire display. For example, the upper left segment in the first digit is also connected to the upper left segment in digits 2 through 10, and so on for all 15 segments. Segments are selected by raising the appropriate segment anodes high so they will attract electrons being given off from the cathode wires.


Each digit has a mesh grid placed between the segment anodes and the cathode. The digits are turned on and off by the grid drivers which put either a high or low voltage on each grid. When the grid is low, the electrons on the cathode cannot sense the positive charge of segment anodes and are blocked from reaching them, keeping the digit blank. When the grid is high, the electrons are attracted toward the grid. Traveling in a vacuum, most of these electrons pick up enough speed to fly past the grid and hit the segment anodes, causing them to light.


As with the Selection system, the Displays are strobed. Each digit is turned on and off 60 times each second. This fast strobing allows the display to be turned on one digit at a time,

but at a rate so fast that we see the display showing complete words and numbers. The strobed signals to the digit grids are the same signals sent to the Column lines of the Selection system, further reducing the number of control lines needed by the microcomputer system

### TECHNITRON DISPLAYS


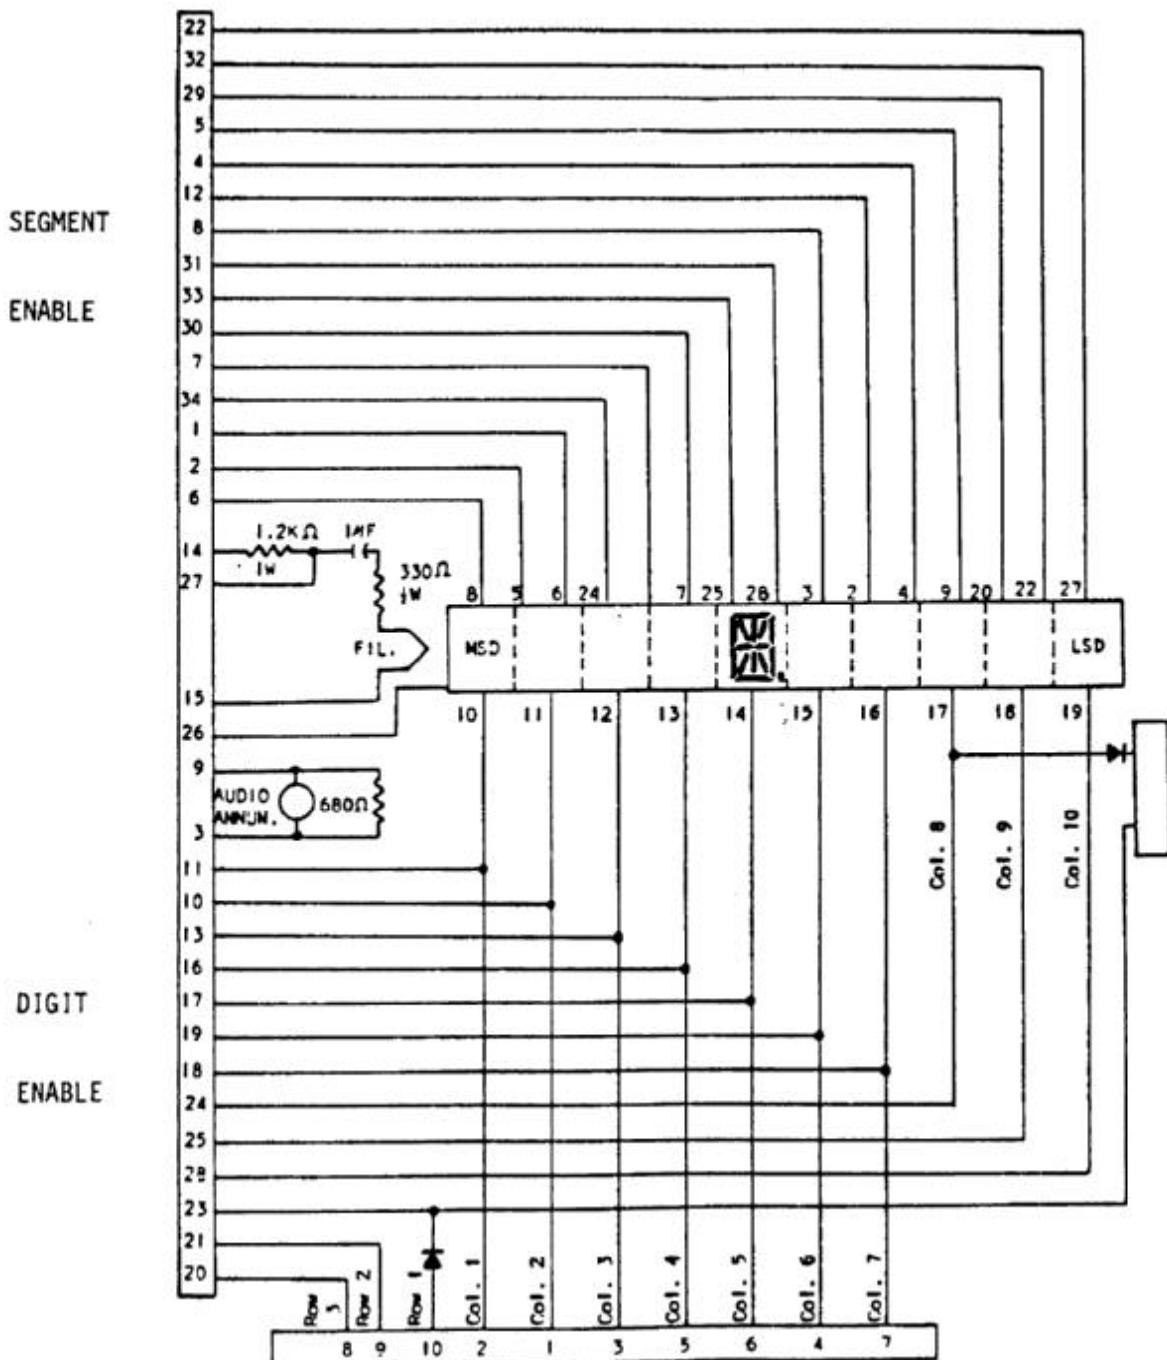


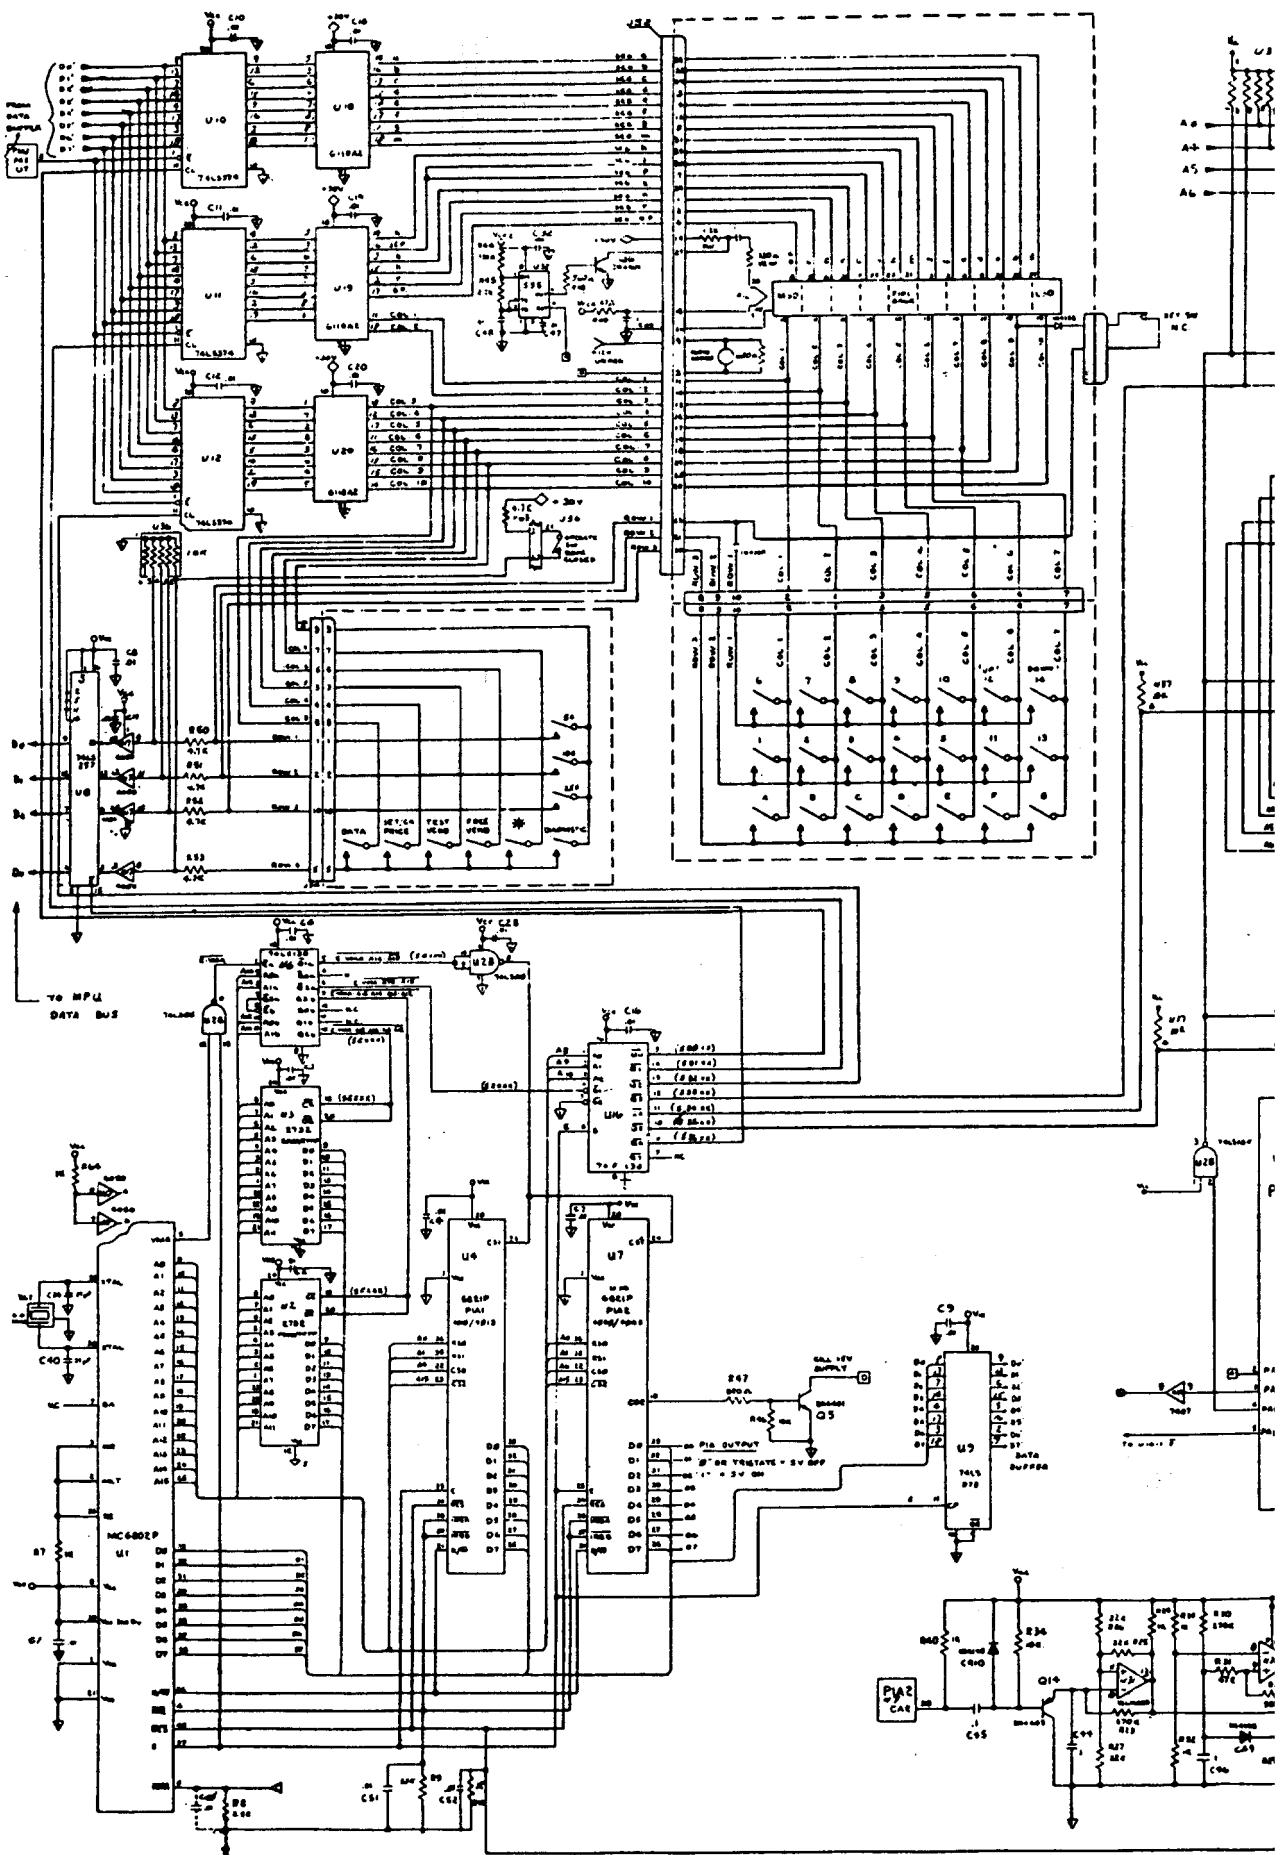


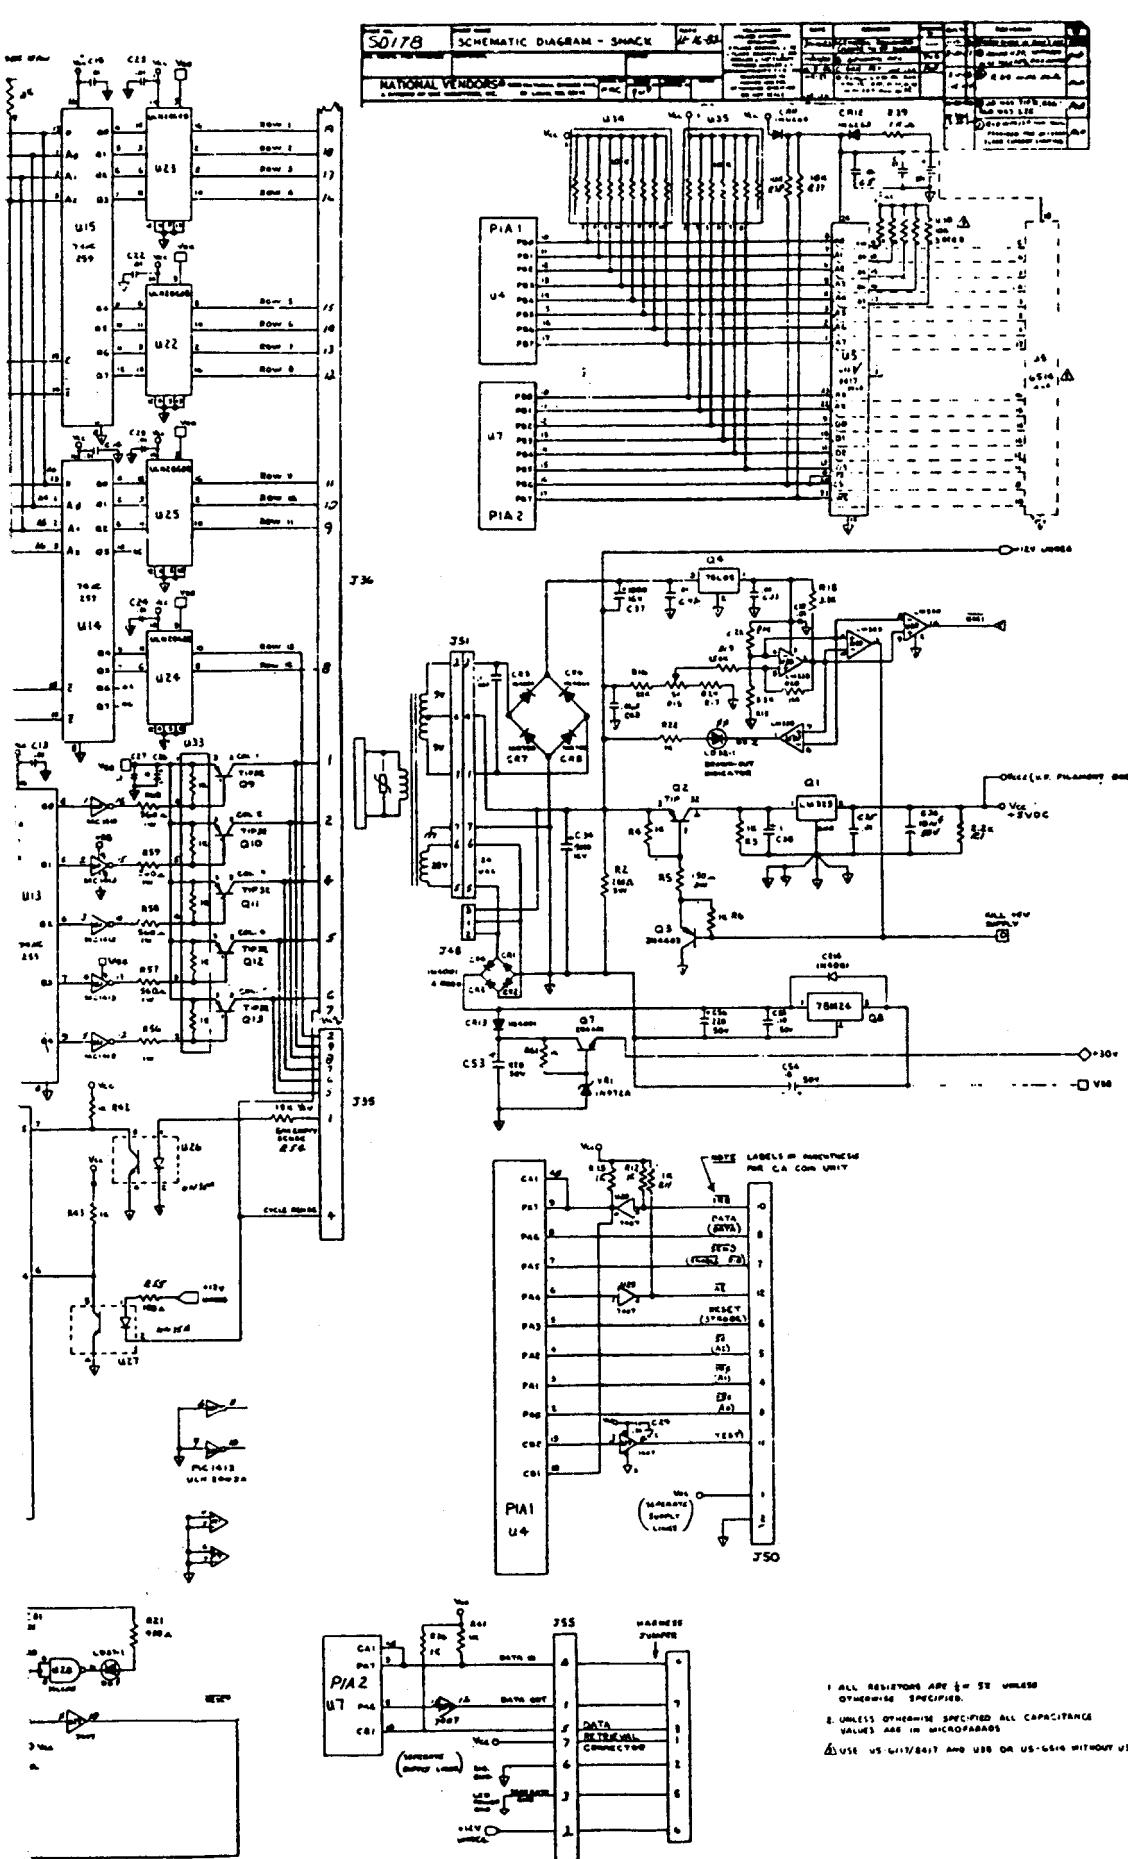

PART NO		PART NAME
SD250		PCB ASSY - REFRESHTRON 3
MATERIAL		FRIGIDAIR A DIVISION OF U.S. INDUSTRIES, INC. ST. LOUIS, MO 63146
NATIONAL VENDORS <sup>®</sup>		TO RECEIVE INQUIRIES, CALL 800-547-4744 FOR LOCAL SUPPORT SPECIFIC TO THIS PRODUCT.
PHONE		1-800-547-4744
10-8-86		
10-14-86		H.H.
BOARD		91/6

REVISI0N  
DATE  
COMBINATIONS  
DATE  
DATE  
C. PILOT RELEASE  
D. PLATE UP ONCE TO SENSORS  
E. PLATE DOWN ONCE TO CR44  
F. PLATE ONCE TO USE PILOT  
G. PLATE ONCE TO USE HOME  
H. PLATE ONCE TO USE INDEX

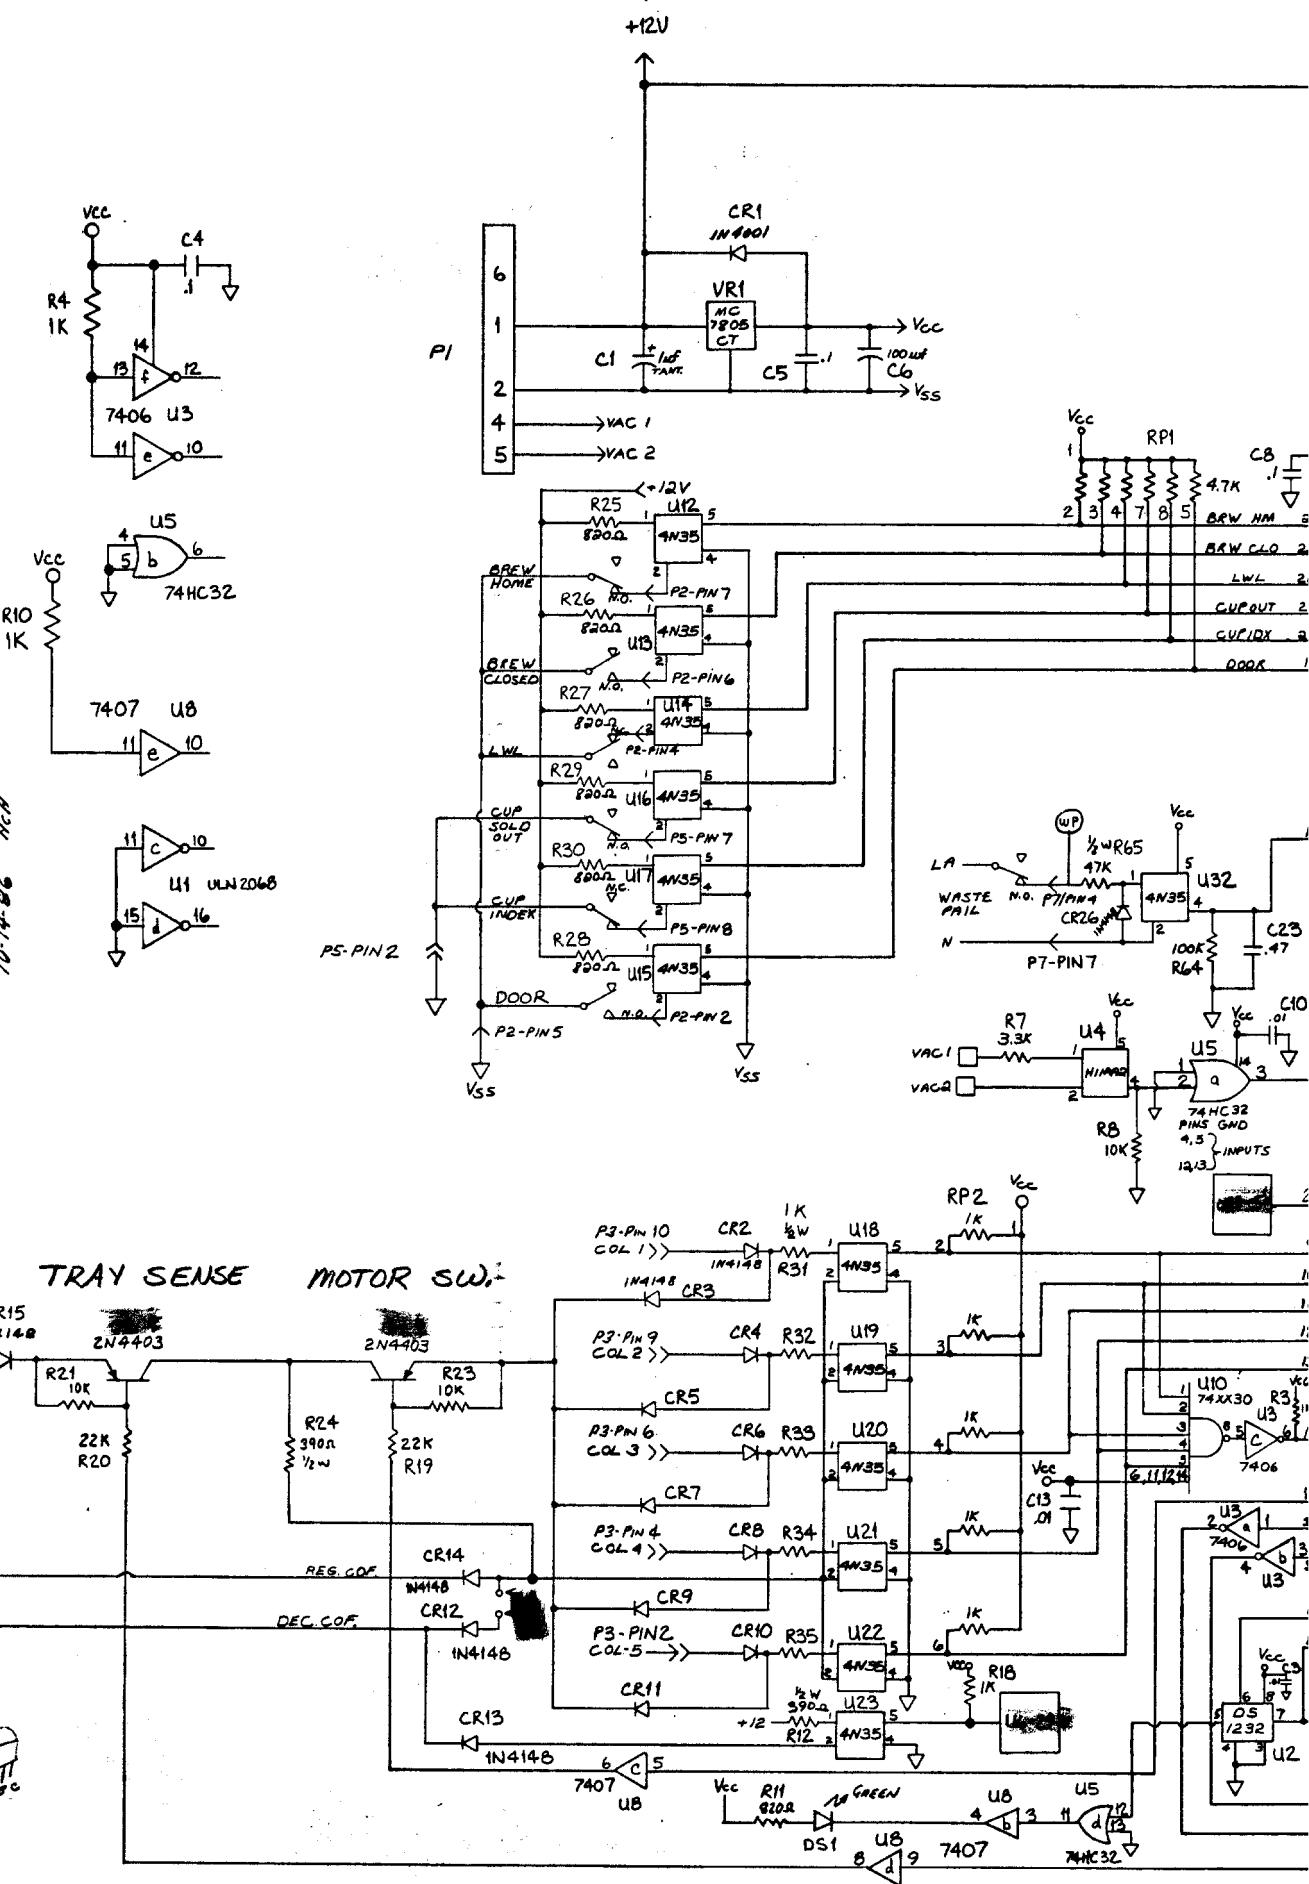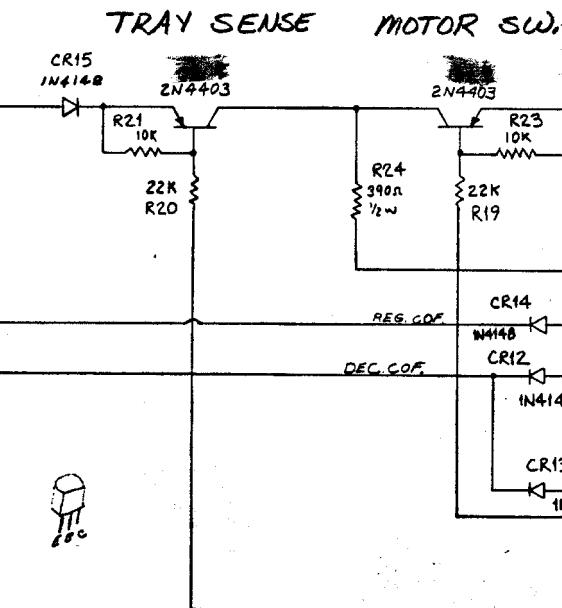

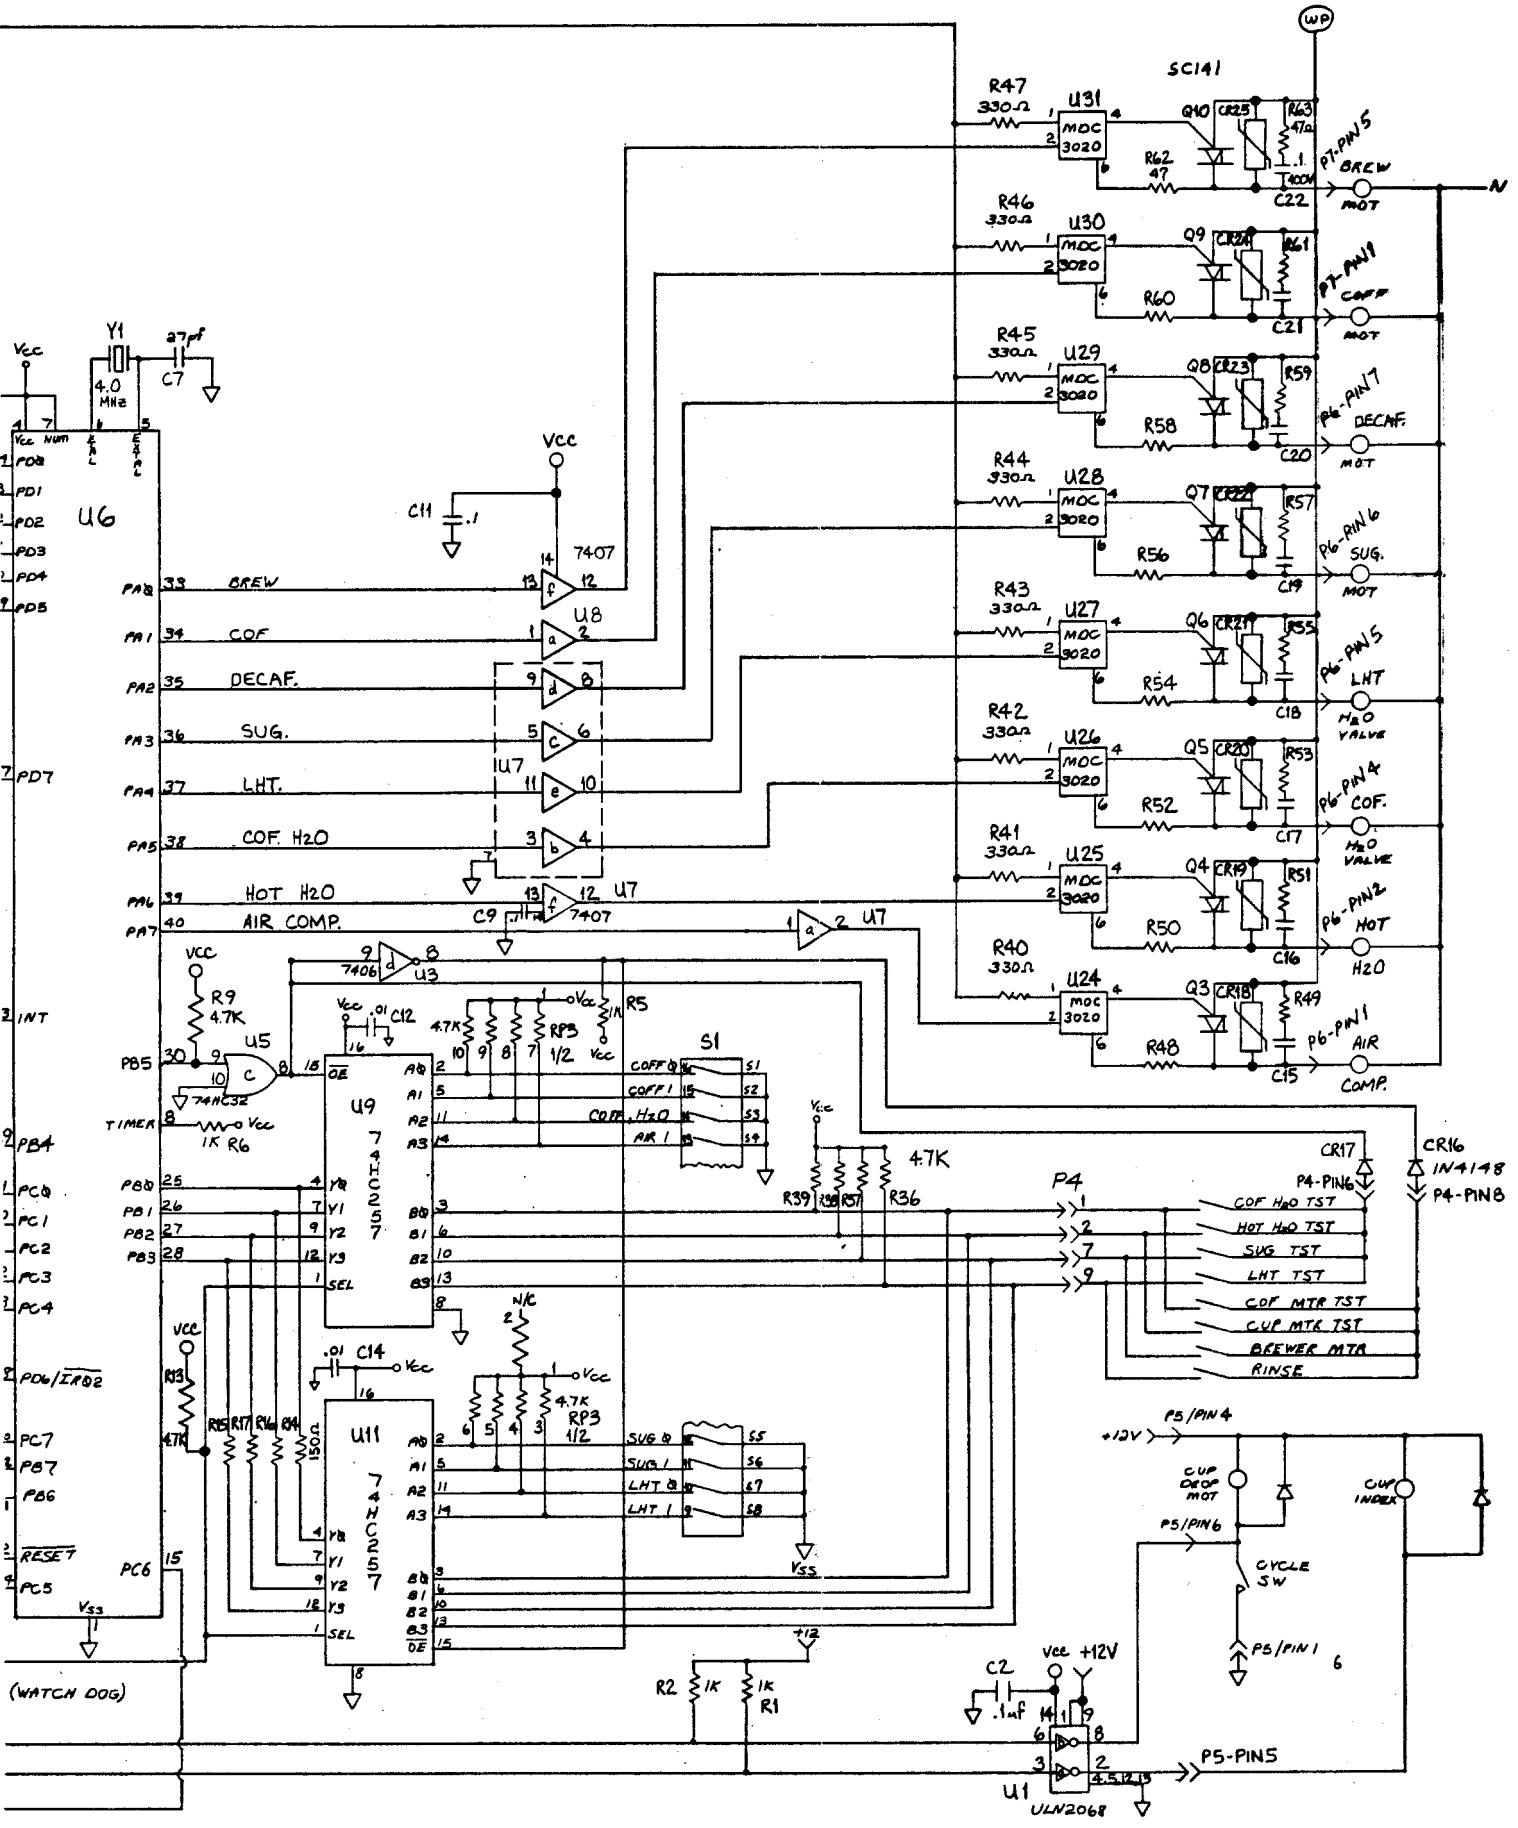

## **SECTION IV**

### **ILLUSTRATED PARTS BREAKDOWN**

This section contains the Parts Breakdown for each assembly of the Snacktron 1 Merchandiser.

Each Illustration shows an exploded view with index numbers. These numbers correspond with the numbers in the parts list column headed INDEX NO. The DESCRIPTION column lists the identifying name of each part or assembly. The PART NUMBER column lists the part number of each part or assembly. The NO. REQ. column lists the number required for each part or assembly.

#### **HOW TO USE THE PARTS LIST**

To find the part number of a part or assembly, turn to the Flowchart and pick out the figure that uses the part or assembly desired. Turn to that figure and locate the part and its index number. Find the index number in the parts list and read across for a complete description.

#### **HOW TO ORDER PARTS OR ASSEMBLIES**

To avoid delays and errors in shipping, give the part number, complete description, and quantity required. Also, include the Model name and Serial No.

# SNACKTRON 1

IMPERIAL CROWN  
MERCHANTISER

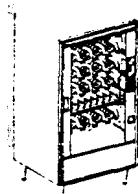


FIGURE 4-1

SNACK TRAY  
ASSEMBLY

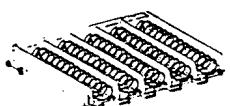


FIGURE 4-2

CANDY TRAY  
ASSEMBLY

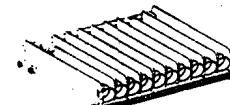


FIGURE 4-3

GUM AND MINT  
ASSEMBLY



FIGURE 4-4

BASE PLATE ASSEMBLY



FIGURE 4-7

RIGHT SIDEWALL ASSEMBLY  
LEFT SIDEWALL ASSEMBLY  
(OPP.)

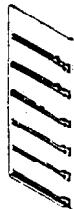


FIGURE 4-7

CABINET ASSEMBLY



FIGURE 4-6

GUM AND MINT  
MOTOR ASSEMBLY

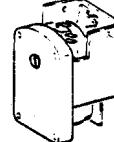


FIGURE 4-5

DOOR ASSEMBLY



FIGURE 4-12

ELECTRICAL WIRING  
ASSEMBLY

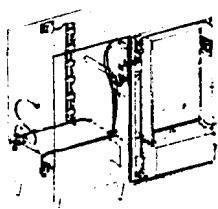


FIGURE 4-8

CHANNEL & RECEPTACLE  
ASSEMBLY

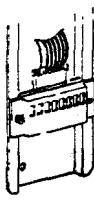


FIGURE 4-9

PUSHBUTTON GRID  
ASSEMBLY



FIGURE 4-13

COIN RECEPTACLE  
ASSEMBLY




FIGURE 4-14

CONTROLLER PCS (MARS)  
ASSEMBLY



FIGURE 4-10

FAN AND HOUSING  
ASSEMBLY

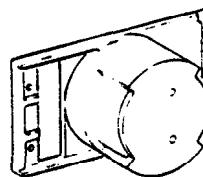

FIGURE

DELIVERY PAN  
ASSEMBLY

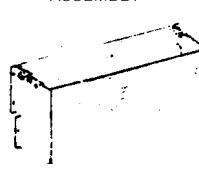


FIGURE 4-15

UPPER DISPLAY LIGHT  
HARNESS BRACKET  
ASSEMBLY

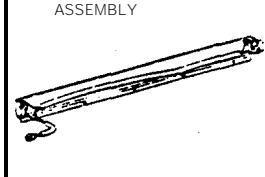


FIGURE 4-16

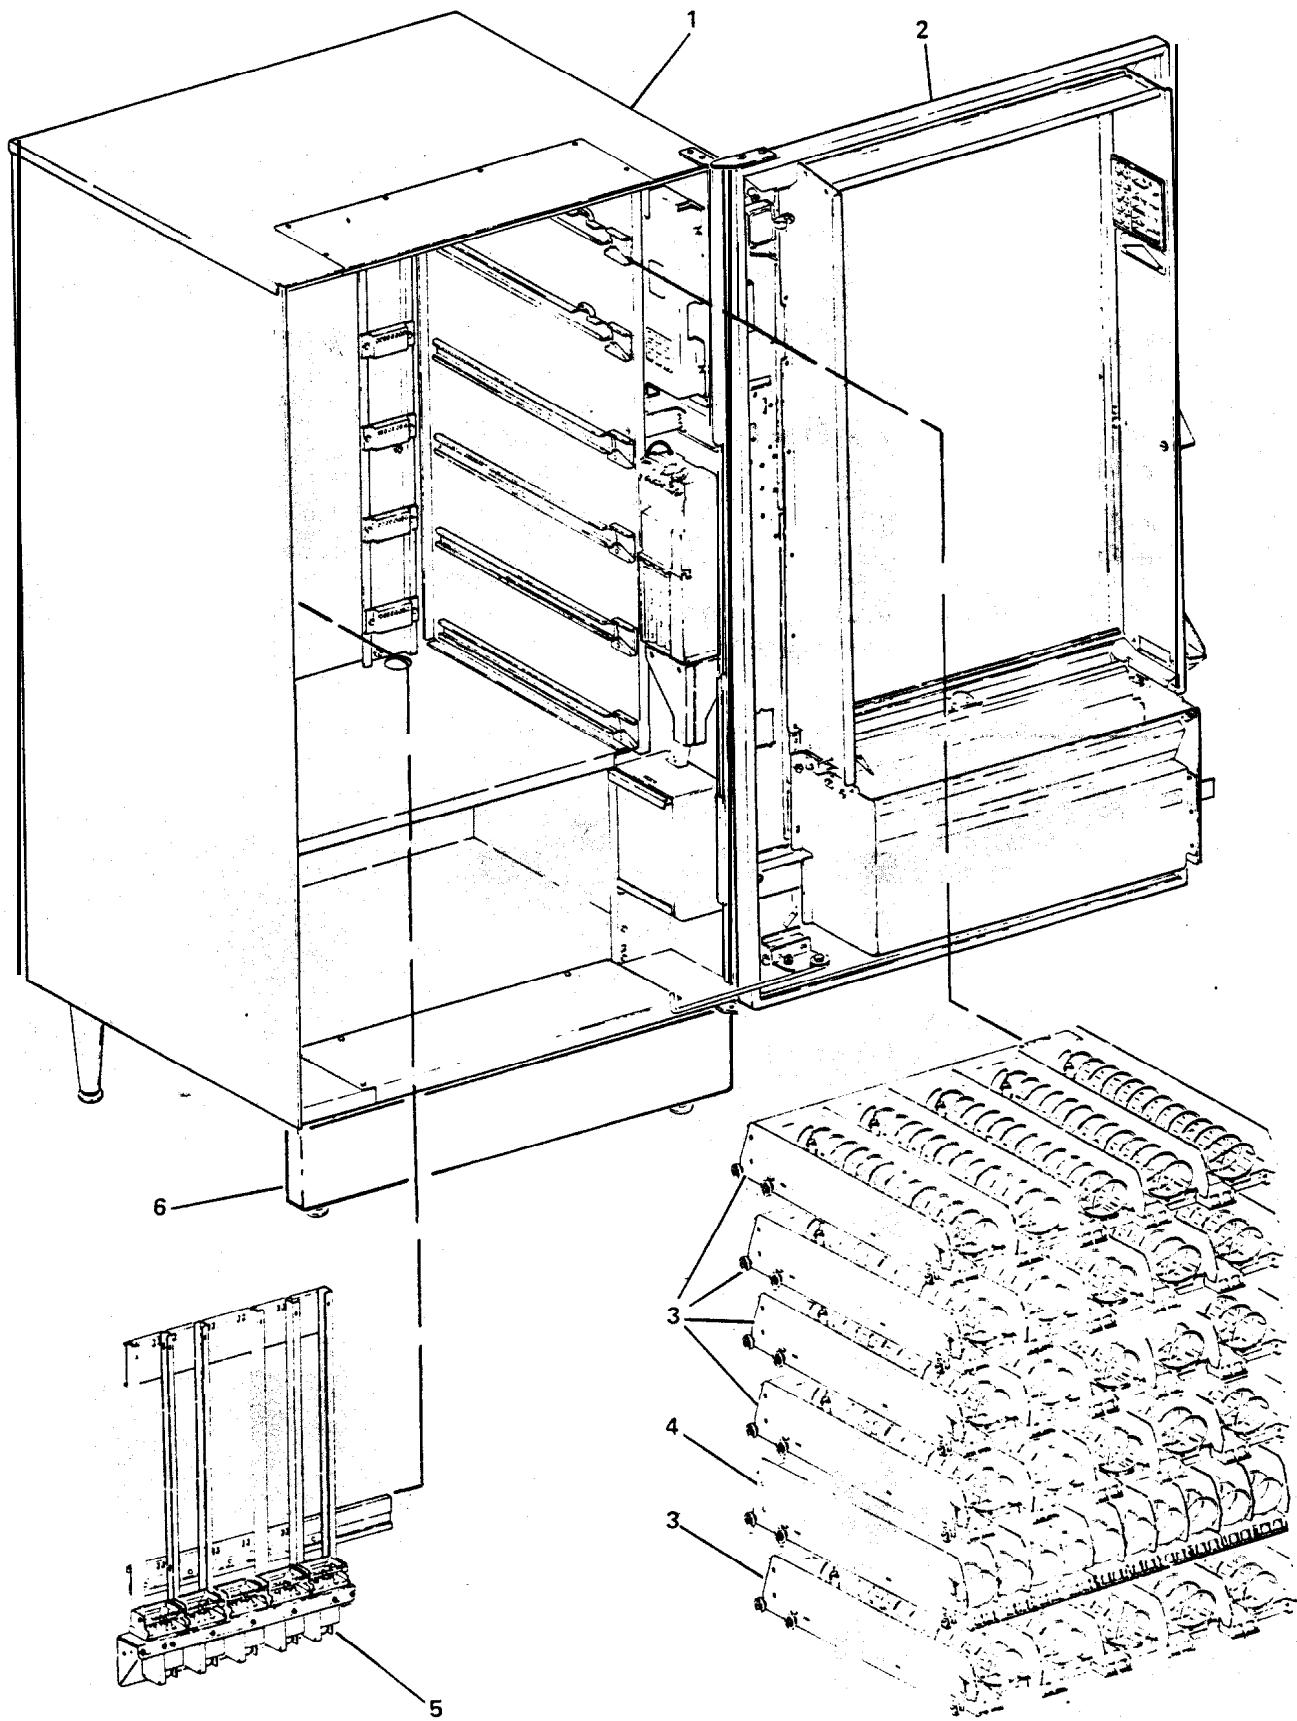


Figure 4-1. Snacktron 1 Merchandiser

## SNACKTRON 1

Index No.	Description	Part Number	RB Part Number	REQ. NO.
1	Snacktron 1" Merchandiser See Figure 4-6			1
2	Cabinet Assembly Final Imperial Crown See Figure 4-12			1
3	Door Assembly- Final Imperial Grown See Figure 4-2			5
4	Snack Tray Assembly-Final See Figure 4-3			1
5	Gum & Mint Assembly See Figure 4-4			1
6	Base Plate Assembly - "NUGRAY" Base Plate Assembly - "AWARD"  See Figure 4-17	2271407 2271051	OBS OBS	1 1

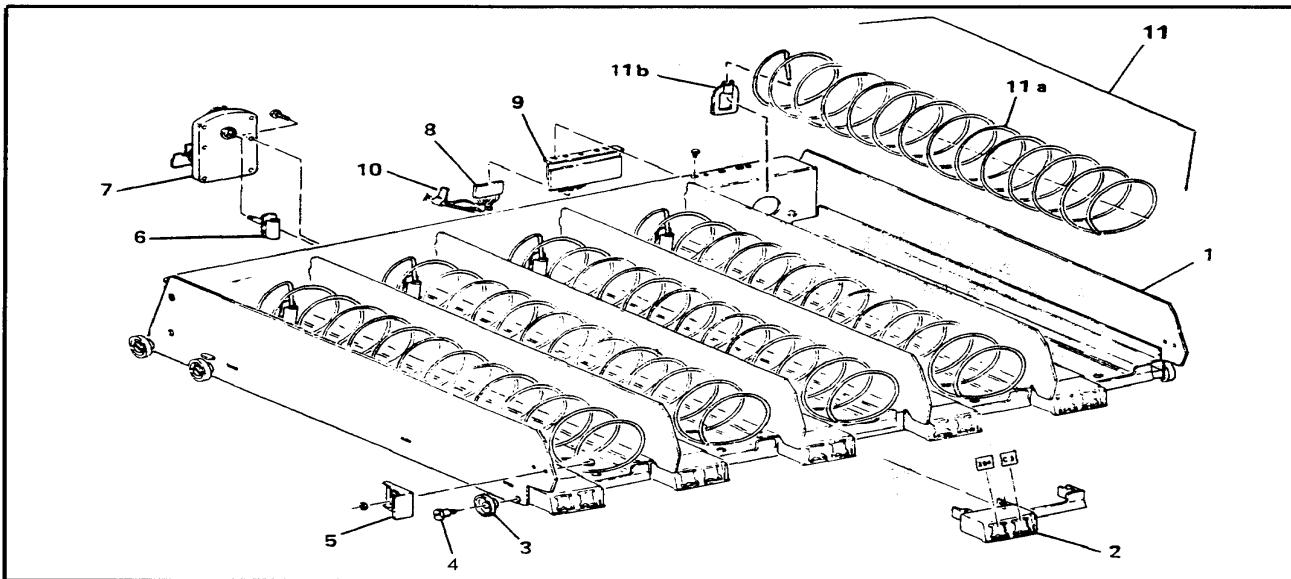


Figure 4-2. Snack Tray Assembly

Index No.	Description	Part#	Note*	REQ.
	Snack Tray Final Assembly See. Figure/Index 4-1/3 next higher assembly	1457000	ACTIVE	1
1	Snack Tray Assembly	1457002	OBS	1
2	Snack Tray Label Holder attaching parts No.8-10 x .38 Hex Hd. T/F Screw	1457001	RB1457099	5
3	Tray Roller	1407018	ACTIVE	6
4	Tray Roller Stud	1457001	RB1457099	6
5	Tray Retainer attaching parts No.8-32 x 3/8 THS - Black Screw	1457078	OBS	1
6	Spiral Coupling	1170206	ACTIVE	1
		1457092	ACTIVE	5

## SNACKTRON 1

Index No.	Description	Part No.	RB Part No.	No. Req.
7	PBC and Motor Assembly See Figure attaching parts PBC and Motor Assembly See Figure attaching parts No. 8-32 x .81 Hex Hd. T/F Screw	1457093  1457027	1457144  ACTIVE	5  10
8	5 Selection Tray Harness	1457017	OBS	1
9	5 Selection Tray PCB and Terminal Block Assembly attaching parts No.8-32 x .38 Hex Hd. T/F Screw 1437204 3	1457013  1437204	ACTIVE  ACTIVE	1  3
10	Observe Polarity Label (Locate 5 places on Tray Harness)  Spiral & Sleeve Assembly - Blue (Options Not Shown) Spiral & Sleeve Assembly - Yellow Spiral & Sleeve Assembly - Red Spiral & Sleeve Assembly - White Spiral & Sleeve Assembly - Green	1457047  1457029  1457032 1457035 1457038 1457041	ACTIVE  ACTIVE  ACTIVE ACTIVE ACTIVE	5  6  12 12 1 1
11a	Spiral - 3.25 Dia. - 11 Count 1457030 Spiral - 3.25 Dia. - 13 Count 1457033 Spiral - 3.25 Dia. - 15 Count 1457036 Spiral - 3.25 Dia. - 20 Count 1457039 Spiral - 3.25 Dia. -- 25 Count 1457042	1457030 1457033 1457036 1457039 1457042	ACTIVE ACTIVE ACTIVE ACTIVE ACTIVE	1(6) 1(12) 1(12) 1(12) 1(5)
11b	Sleeve - Color Ident - Blue (Options Not Shown) Sleeve -- Color Ident - Yellow Sleeve - Color Ident - Red Sleeve - Color Ident - White Sleeve - Color -Ident - Green	1457031  1457034 1457037 1457040 1457043	1457061  1457062 1457063 1457064 1457065	1(6)  1(12) 1(12) 1(12) 1

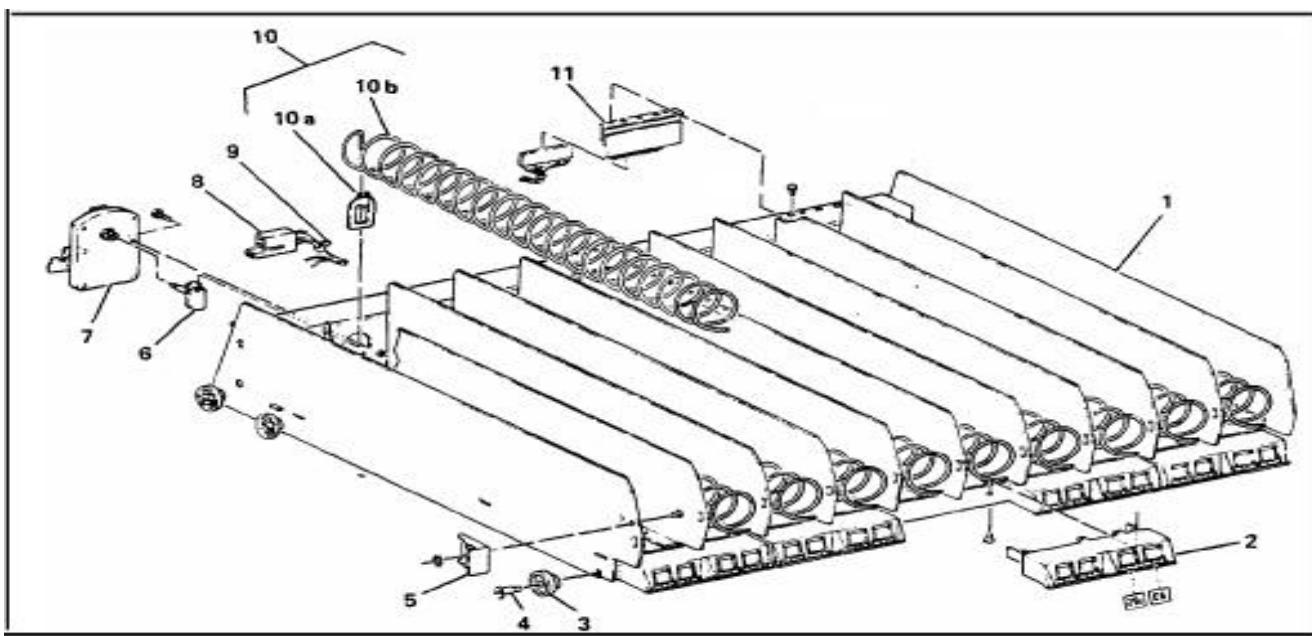


Figure 4-3. Candy Tray Assembly

Index No.	Description	Part No.	RB Part No.	No. Req.
1	Candy Tray Final Assembly See Figure/Index 4-1/4 for next higher assembly	1457100	OBS	1
2	Candy Tray Label Holder attaching parts No.8-32 x .38 Hex Hd. T/F Screw	1457102	OBS	1
3	Tray Roller	1407018	ACTIVE	15
4	Tray Roller Stud	1457001	1457099	6
5	Tray Retainer attaching parts No.8-32 x 3/8 THS Black Screw No.8-32 Nut	1457028	ACTIVE	1
6	Spiral Coupling	1457092	ACTIVE	10

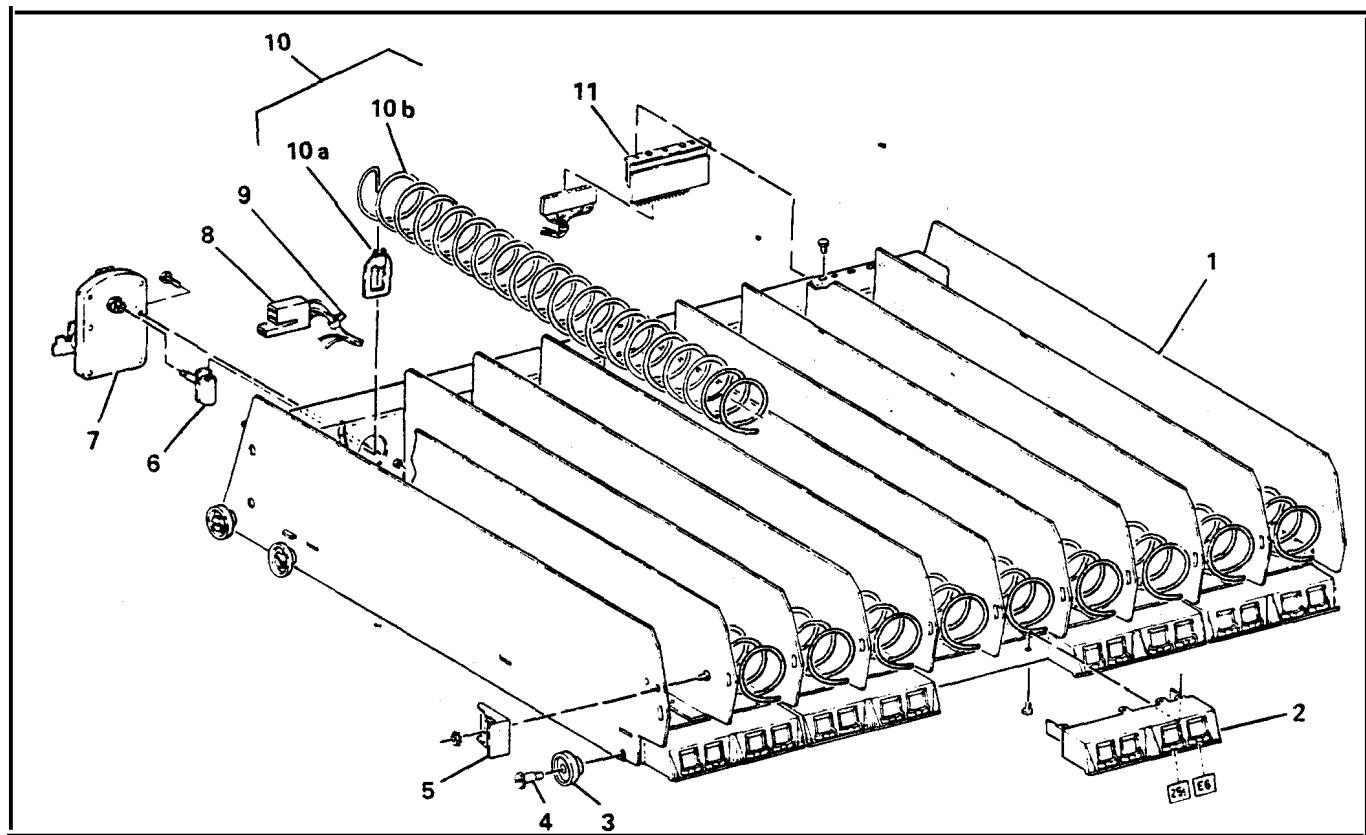


Figure 4-3. Candy Tray Assembly

Index No.	Description	Part #	Note*	Req.
1	Candy Tray Final Assembly See Figure/Index 4-1/4 for next higher assembly	1457100	OBS	1
2	Candy Tray Assembly	1457102	1457137	1
2	Candy Tray Label Holder attaching parts	1457150	ACTIVE	5
3	Tray Roller	1437204	ACTIVE	15
4	Tray Roller Stud	1407018	ACTIVE	6
5	Tray Retainer attaching parts	1457001	1457099	6
5	No.8-32 x .38 Hex Hd. T/F Screw	1457028	ACTIVE	
6	No.8-32 x 3/8 THS Black Screw	1170206	ACTIVE	1
6	No.8-32 Nut	9900081	ACTIVE	1
6	Spiral Coupling	1457092	ACTIVE	10

Index No.	Description	Part No.	Note*	Req.
7	PCB and Motor Assemly See Figure attaching parts No.8-32 x .81 Hex Md. T/F Screw	1457093	RB1457144	
8	(10 Selection Tray Harness	1457027	ACTIVE	20
9	Observe Polarity Label (Located 10 places on Tray Harness)	1457120	ACTIVE	1
10	10 Selection Tray Harness Observe Polarity Label (Located 10 places on Tray Harness) Blue Spiral and Sleeve Assembly Yellow Spiral and Sleeve Assembly Red Spiral and Sleeve Assembly White Spiral and Sleeve Assembly Green Spiral and Sleeve Assembly	1457047	ACTIVE	10
10a	Blue Color Ident. Sleeve Yellow Color Ident. Sleeve Red Color Ident. Sleeve White Color Ident. Sleeve Green Color Ident. Sleeve	1457110 1457112 1457114 1457116 1457124	ACTIVE ACTIVE ACTIVE ACTIVE ACTIVE	opt. opt. opt. opt. opt.
10b	15 Count 2.69 Dia. Spiral 20 Count 2.69 Dia. Spiral 30 Count 2.69 Dia. Spiral 38 Count 2.69 Dia. Spiral 13 Count 2.69 Dia. Spiral	1457031 1457034 1457037 1457040 1457043 1457111 1457113 1457115 1457117 1457125	RB1457061 RB1457062 RB1457063 RB1457064 RB1457065 ACTIVE ACTIVE ACTIVE ACTIVE ACTIVE	opt. opt. opt. opt. opt. opt. opt. opt. opt. opt.
11	10 Selection Tray PCB and Terminal Block Assembly	1457118	ACTIVE	1

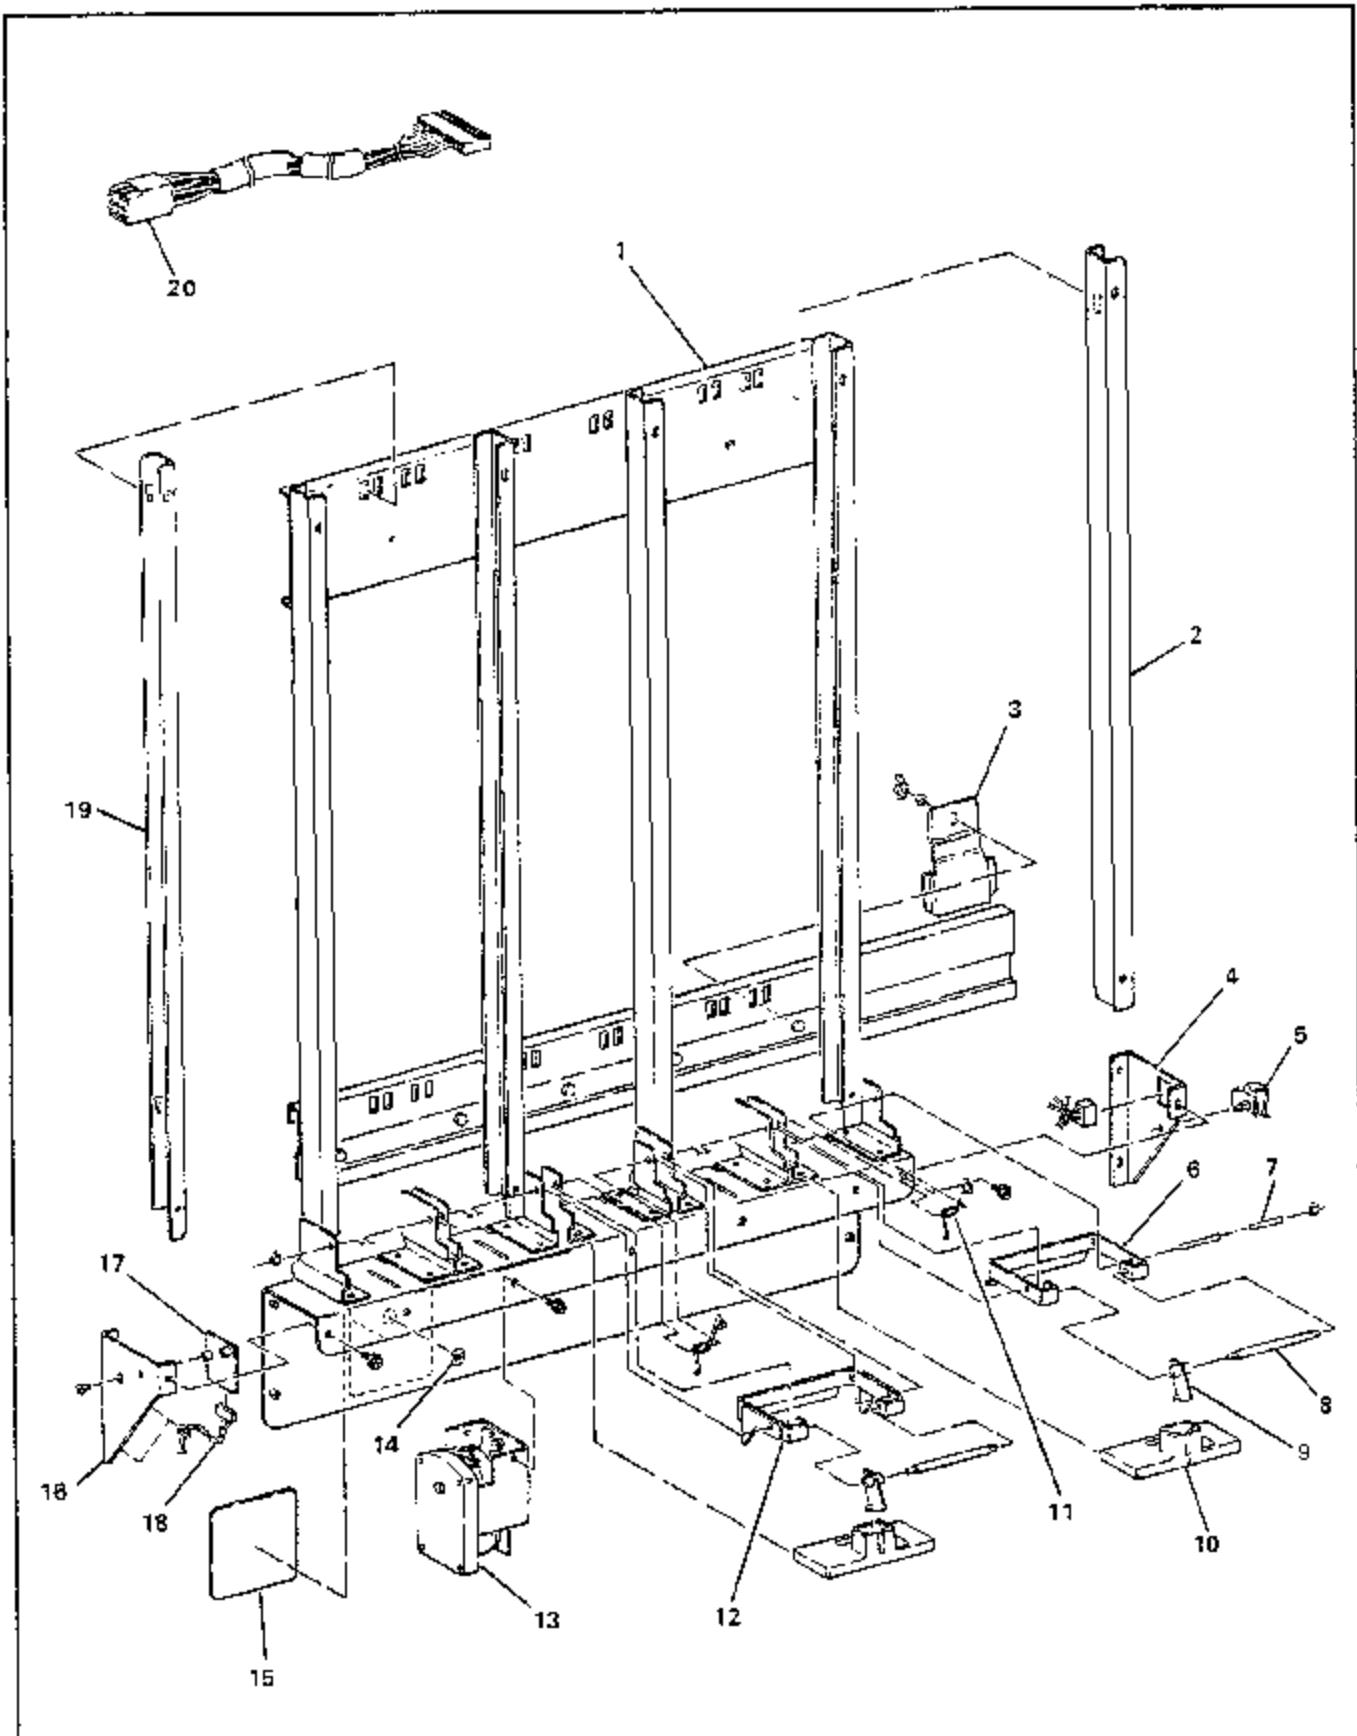


Figure 4-4. Gum and Mint Assembly

<b>Index No.</b>	<b>Description</b>	<b>Part Number</b>	<b>Note*</b>	<b>R e q.</b>
	Gum & Mint Assemblv See Fiaure 4-1/5 for next higher assembly	1459000	OBS	Ref.
1	Magazine Assembly - Gum & Mint	1459006	ACTIVE	1
2	Channel, Column - Adjustable - R.H.	1459002	OBS	1
3	Retainer - Small - G & M attaching parts Steel Washer Wing Nut	1419018	ACTIVE	5
4	End Plate - Motor Housing - R.H. attaching parts No.8-32 x .31 Hex Hd. T/F Black Screw	1459004	ACTIVE	1
5	Routing Clip - Snap In	1451097	ACTIVE	3
6	Vend Bar Assembly	9989324	ACTIVE	1
7	R o d - P i v o t - Vend Bar attaching part Speed Clip - Compressor	1419015	OBS	4
8	Pin - Pivot - Vend Bar Link	1459001	ACTIVE	1
9	Link - Vend Flap	2366055	ACTIVE	2
10	Ejector - G & M	1419022	ACTIVE	5
11	Spring - Torsion - G & M	1419020	ACTIVE	5
12	Center Vend Bar Assemby	1419021	ACTIVE	5
13	Motor Assembly - Gum & Mint See Figure 4-5 attaching part No.8-32 x .31 Hex Hd. T/F Black Screw	1459018	ACTIVE	5
14	Label - Gum & Mint Column I.D.	1459014	OBS	1
15	Label - G & M Retainer Adjustment	1459042	OBS	5
16	End Plate - Motor Housing attaching part No. 8-32.31 Hex Hd. T/F Black Screw	1451097	ACTIVE	15
17	PCB Assembly - Gum & Mint attaching part No.6-32 x 1/4 RHS Screw	1459028	ACTIVE	3
		9900003	ACTIVE	1
				2

**SNACKTRON 1**

<b>Index No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Note*</b>	<b>R e q .</b>
18	Harness - Gum & Mint attaching part Retaining Clip - Grommet	1459029	ACTIVE	1
19	Channel - Column - Adjustable L.H.	4041058	ACTIVE	6
20	Jumper - Gum & Mint	1459003 1459030	OBS ACTIVE	1 1

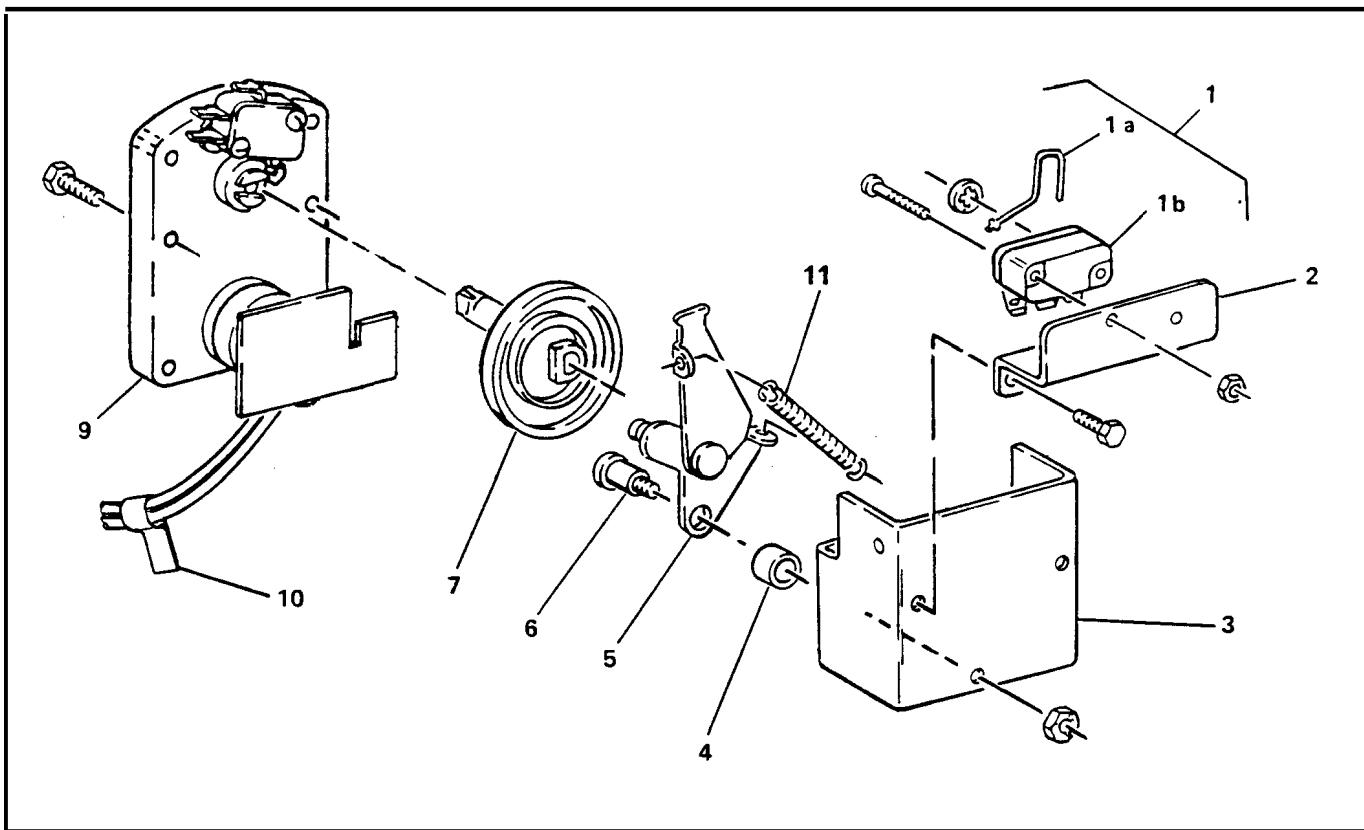


Figure 4-5. Gum and Mint Motor Assembly

Index No.	Description	Part Number	Note*	No. Req.
1	Gum & Mint Motor Assembly (See Figure/Index 4-4/13 for next higher Assembly)	1459042	ACTIVE	Ref..
1a	Switch & Lever Assembly attaching parts	1419035	ACTIVE	1
1b	No.4-40 x 3/4 RHS Screw	1217216	ACTIVE	2
	No.4-40 W/LW Nut	1217159	ACTIVE	2
	Lever - Switch, Sold Out	1419037	ACTIVE	1
	attaching part			
	Retainer, Push On	1217162	ACTIVE	1
2	Switch	5220431	ACTIVE	1
2	Bracket - Sold Out Switch attaching part	1419031	ACTIVE	1
3	No.8-32 x .31 Hex Hd. T/F Black Screw	1451097	ACTIVE	2
3	Motor Bracket attaching parts	1459020	ACTIVE	1
4	No.8-32 x .81 Hex Hd. T/F Screw	1457027	ACTIVE	2
4	Follower Plate Spacer	1419028	ACTIVE	1

**SNACKTRON 1**

<b>Index No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Note*</b>	<b>No. Req.</b>
5	Actuator Arm Assembly attaching part	1419038	RB1459039	1
6	No.8-32 Self Locking Nut	9900072	ACTIVE	1
7	Stud -Pivot - Follower Plate	1419029	ACTIVE	1
9	Ejector - Gum & Mint Cam	1459043	ACTIVE	1
10	PCB & Motor Assembly - Tray	1457093	RB1457144	
11	Label - Observe Polarity	1457047	ACTIVE	1
	Spring - Ejector - Gum & Mint	1419030	ACTIVE	1


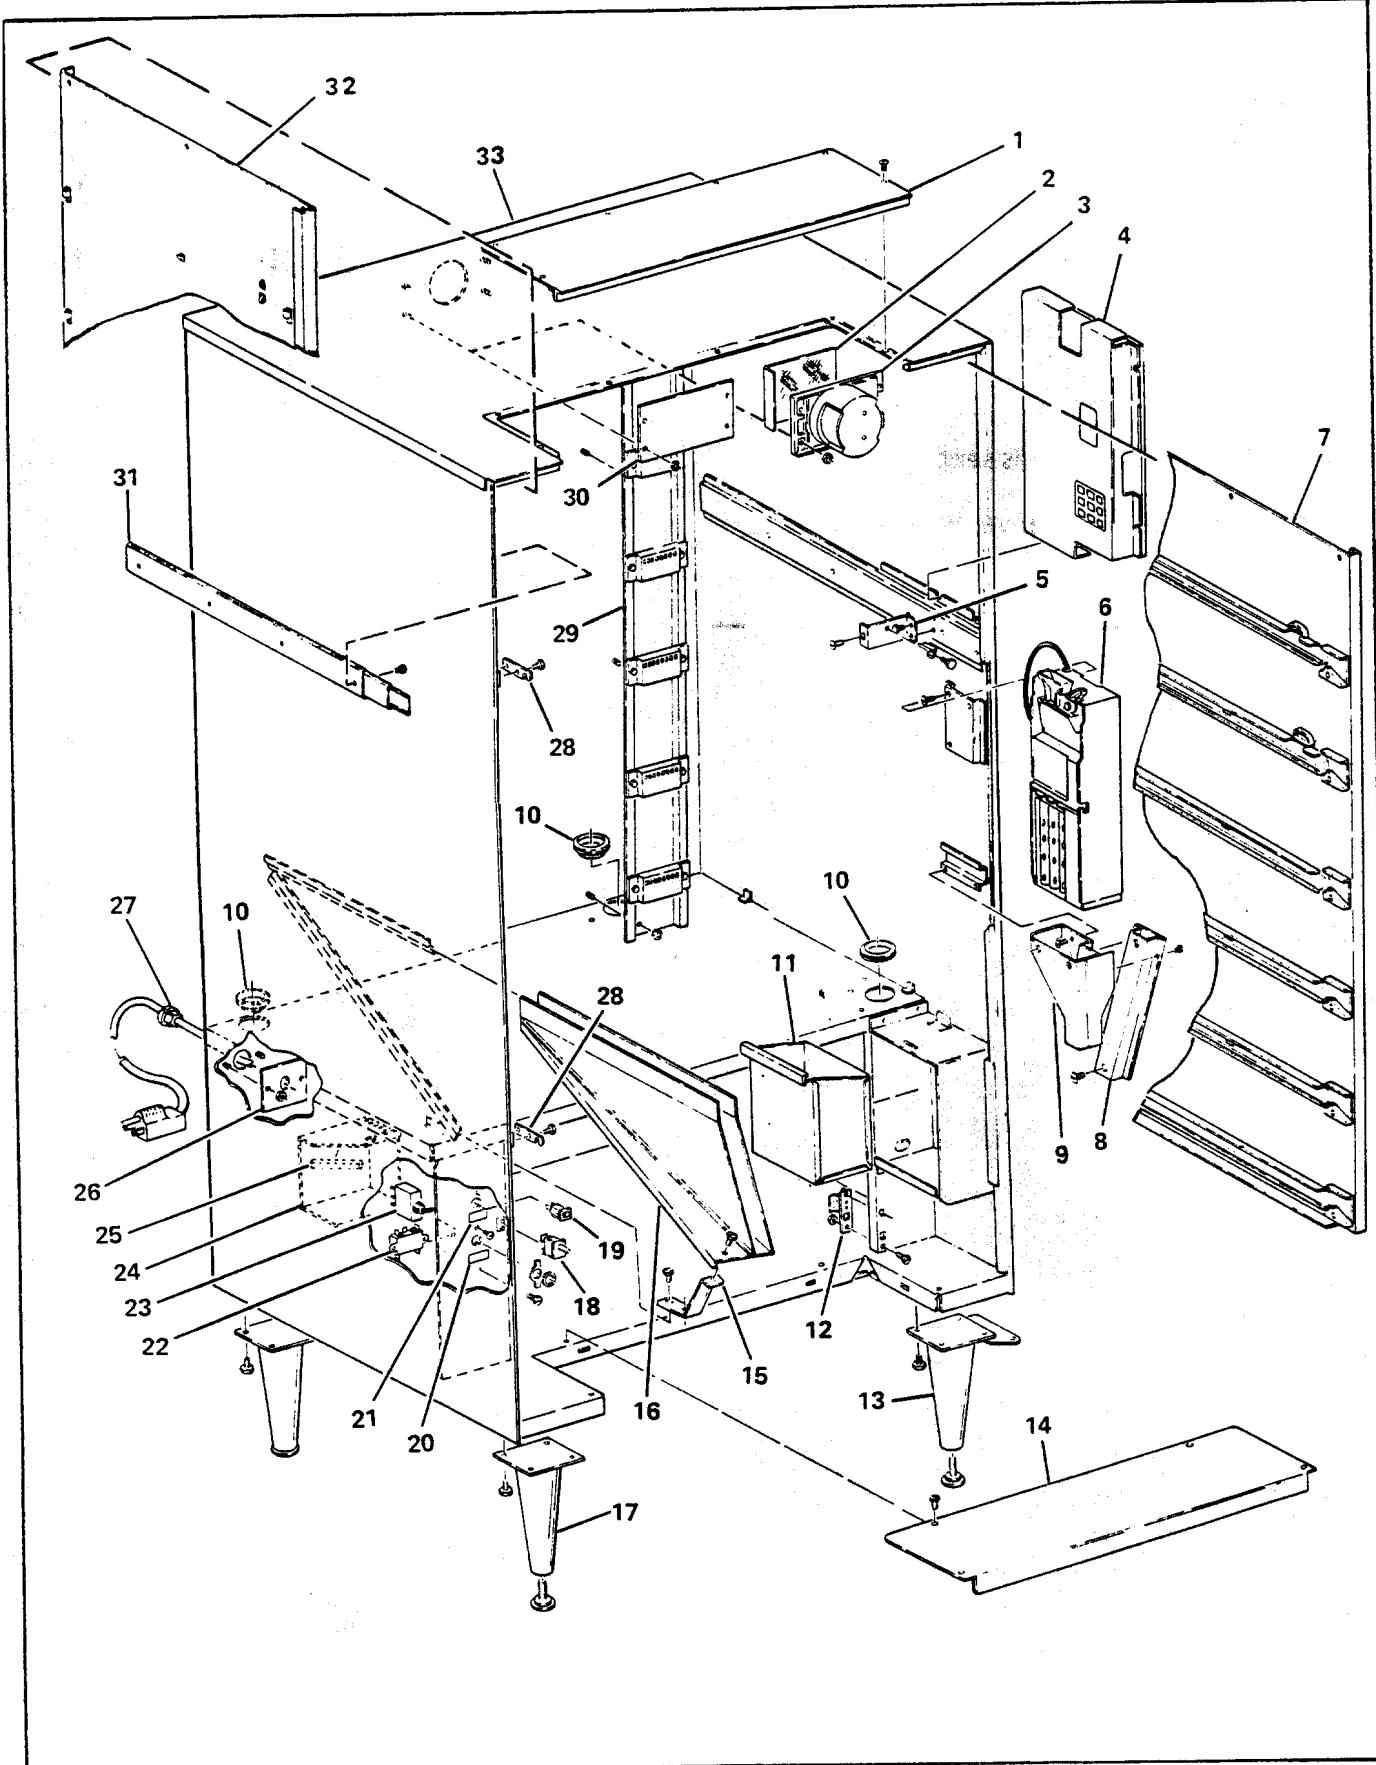


Figure 4-6. Cabinet Assembly

Index No.	Description	Part Number	Note*	No. Req.
1	Cabinet Assembly (See Figure/Index 4-1/1 for next higher assembly)			Ref.
1	Filler Assembly - Cabinet Top attaching parts	1411032	ACTIVE	1
2	Nut No.8-32 W/LW Screen Cabinet Back	9900081 1451087	ACTIVE ACTIVE	6 1
3	Fan & Housing Assembly (Opt) See Figure 4-11 attaching parts	1451088	ACTIVE	1
4	Nut No.10-32 W/LW Controller PCB & Component Assembly Mars See Figure 4-10	9900164 1451045	ACTIVE RB1451230	4 1
5	Bracket-Support-Liner Sidewall attaching parts	1451094	ACTIVE	1
6	Screw No.8-32 x .31 Hex Hd T/F Black Screw No.8-32 x 3/8 THS Black (attaches Bracket to R.H. Liner Sidewall)	1451097 1170206	ACTIVE ACTIVE	2 1
7	Coin Unit - Mars Changer MC5000 Mounting Hardware Screw No.8-32 x 3/8 RHS	5900112 9900019	ACTIVE ACTIVE	1 3
8	Right Sidewall Assembly See Figure 4-7 attaching parts	1451057	RB1451169	1
9	Screw No.8-32 x .31 Hex Hd. T/F Black Nut No.10-32 W/LW	1451097 9900164	ACTIVE ACTIVE	6 5
10	Chute Assembly - Coin Return attaching parts	1451072	ACTIVE	1
11	Screw No.6-20 x 3/8 PHS T/C Coin Chute Assembly attaching parts	9900203 1451068	ACTIVE ACTIVE	2 1
12	Screw No.6-32 x 5/16 THS S/T Snap Bushing	9900166 2301017	ACTIVE ACTIVE	3 3
13	Money Box Assembly Plate & Spring Assembly - Door Check attaching parts	1451029 1451039	RB4302408 ACTIVE	1
	Screw No.8-32 x .31 Hex Hd. T/F Black Leg, Hinge & Leveler Assembly - Cabinet attaching parts	1451097 3121148	ACTIVE RB3151063	2
	Screw .31-18 x 1.00 Hex Hd. T/ F	1451093	RB9900218	4

<b>Index No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Note*</b>	<b>No. Req</b>
14	Filler Assembly - Base attaching parts Screw No.8-32x.31 Hex Hd T/F Black	1411034	RB1451329	(1)
15	Bracket Mounting-G & M Chute attaching parts Screw No.8-32 x.31Hex Hd. T/F Black	1451097 1451095	ACTIVE OBS	4 1
16	Chute Assembly - G & M attaching parts Screw No.8-32 x .31Hex Hd. T/F Black	1451097 1451034	ACTIVE ACTIVE	2 (1)
17	Leg & Leveler Assembly - Cabinet attaching parts Screw .31-18 x 1.00 Hex Hd. T/F	1171098	RB1471237	3
18	Switch - Interlock	1401110	ACTIVE	1
19	Circuit Breaker - 3 Amp	9989336	ACTIVE	1
20	Label -Main Power	1451138	ACTIVE	
21	Label - Circuit Breaker	1451137	OBS	1
22	Interference - Filter attaching parts Nut -No.8-32 W/LW Screw No.8-32x 3/8PHS W/LW	9989100 9900081 9900023	ACTIVE ACTIVE	1 2 2
23	Switch DPST	4041150	RB9984629	1
24	Cover - Interlock Switch attaching parts Screw No.8-32 x 3/8PHS W/LW Nut No. 8-32 W/LW	1451081 9900023 9900081	ACTIVE ACTIVE	(1) 2 2
25	Grommet - Strip	1451044	OBS	1
26	Plate & Power Cord Assembly attaching parts Nut No.10-32W/LW	1451047 9900164	ACTIVE OBS	(1) 2
27	Straight Thru Heyco	2221041	OBS	1
28	Lock Arm- Cabinet- Left attaching parts Screw No.10-32 x 3/8 PHS T/C W/LW	4241182 4041053	ACTIVE	2 4
29	Channel & Receptacle Block Assembly See Figure 4-9 attaching parts Nut No.10-32W/LW	1451062 9900164	ACTIVE	(1) 4

Index No.	Description	Part No.	Note*	No. Req.
(38)	Cover - Fan attaching parts	1451078	ACTIVE	1
31	Nut No. 10-32 W/LW Mount Slide - G 8 M attaching parts	9900164 1451080	ACTIVE OBS	4 1
32	Screw - No. 8-32 x .31 Hex Hd. T/F-Black Left Sidewall Assembly See Figure 4-1 attaching parts	1451097 1451050	ACTIVE OBS	4 1
33	Screw No.8-32 x .31 Hex Hd. T/F Black Nut No.8-32 W/LW Cabinet Assembly Not Shown	1451097 9900164 1451000	ACTIVE ACTIVE OBS	6 6 1
	Label - Tray Removal Label - Candy Loading Union Label Patent Label Label - N.V. Logo	1451098 1451129 2221039 2221045 2221580	OBS OBS ACTIVE OBS OBS	1 1 1 1 1
	Tag - Electrical Rating	1451082	OBS	1

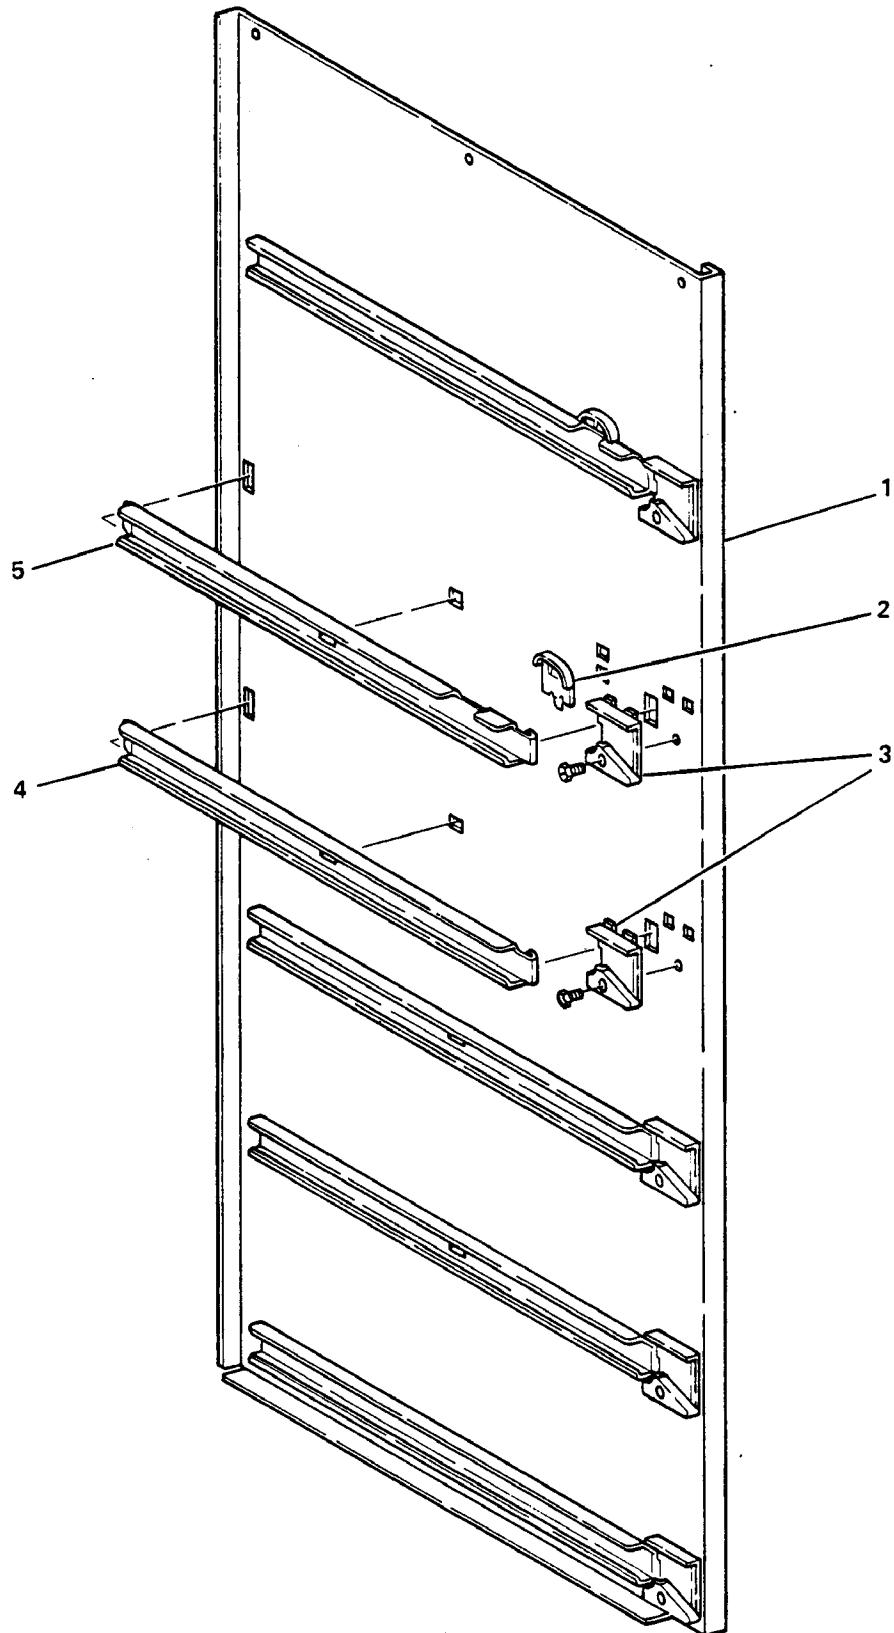

**NOTE:**

Right Sidewall Assembly Shown -  
Left Sidewall Opposite

Figure 4-7. Cabinet Sidewall Assembly

<b>Index No.</b>	<b>Description</b>	<b>Part Number</b>	<b>Note*</b>	<b>No. Req.</b>
	Left Sidewall Assembly Right Sidewall Assembly (See Figure/Index 4-2/7 & 4-2/29 for next higher assembly)	1451050 1451057	OBS OBS	Ref. Ref.
1	Sidewall Liner R.H. Sidewall Liner L.H.	1451058 1451051	OBS OBS	1 1
2	Extension - Guide Rail Upper R.H. Extension - Guide Rail Upper L.H.	(1451054) (1451054)	ACTIVE ACTIVE	2
3	Ramp - Tray - R.H. Ramp - Tray - L.H. attaching parts	(1451061) (1451055)	RB1451172 RB1451168	1
	Screw No.8-32 x .31 Hex Hd. T/C	1451056	RB9900106	12
4	Guide Rail - Lower R.H. Guide Rail - Lower L.H.	(1451059) (1451052)	RB1451216 RB1451215	4 4
5	Guide Rail - Upper R.H. Guide Rail - Upper L.H.	(1451060) (1451053)	RB1451217 RB1451217	2 2


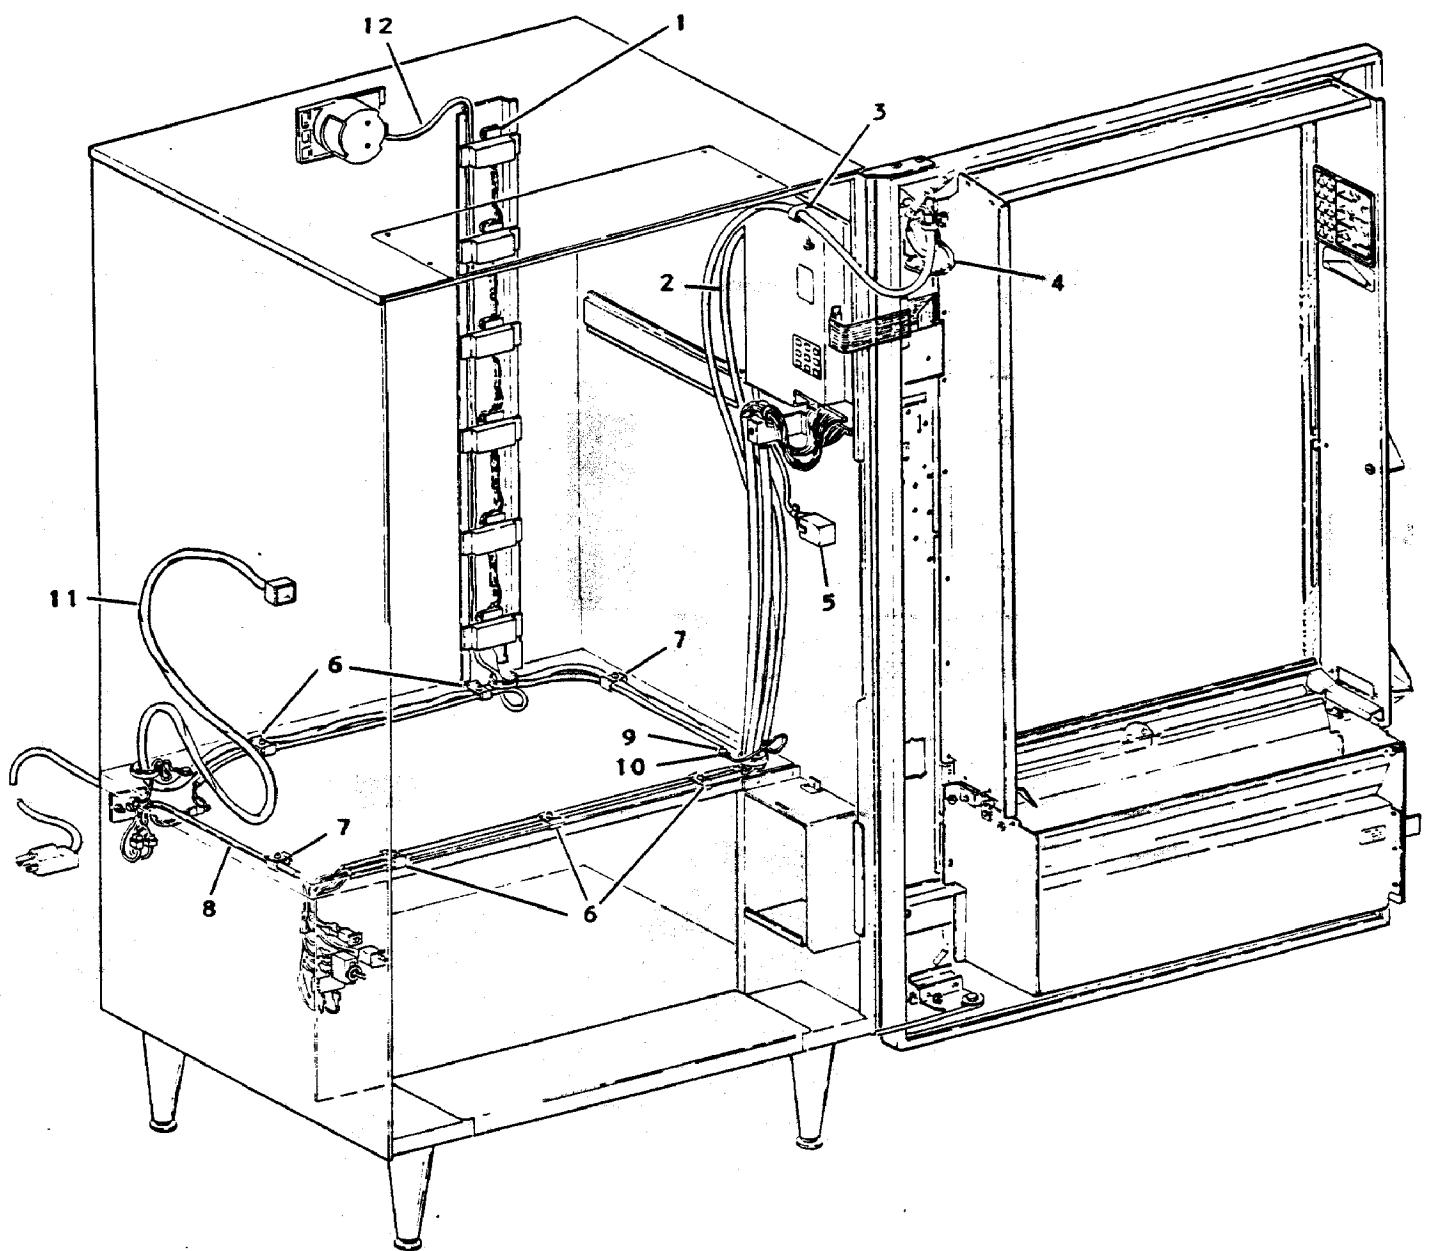


Figure 4-8. Electrical Wiring Assembly

## SNACKTRON 1

Index No.	Description	Part Number	Note*	No. Req.
	Electric Wiring Assembly			
1	Cabinet Harness	1451075	ACTIVE	1
2	Harness - Power to Controller	1451130	ACTIVE	1
3	Wire Clamp attaching part No.6-32 x .25 RHS T/C Screw	2302227 9900104	ACTIVE ACTIVE ACTIVE	1 1 1
4	Harness - Power to Transformer	1451125	ACTIVE	1
5	Harness - Coin -Mech. - Mars Interface	1451120	ACTIVE	1
6	Grommet Routing Clip	9989323	ACTIVE	5
7	Grommet Routing Clip	9989324	ACTIVE	2
8	Harness - Power Control	1451123	OBS.	1
9	No. 8-32 x .31 Hex Hd. T/F Screw (Black)	1451097	ACTIVE	2
10	No.8 External Tooth Lock washer	6131148	ACTIVE	2
11	Harness - Gum and Mint	1459029	ACTIVE	1
12	Harness Fan	1451122	ACTIVE	1

**SNACKTRON 1**

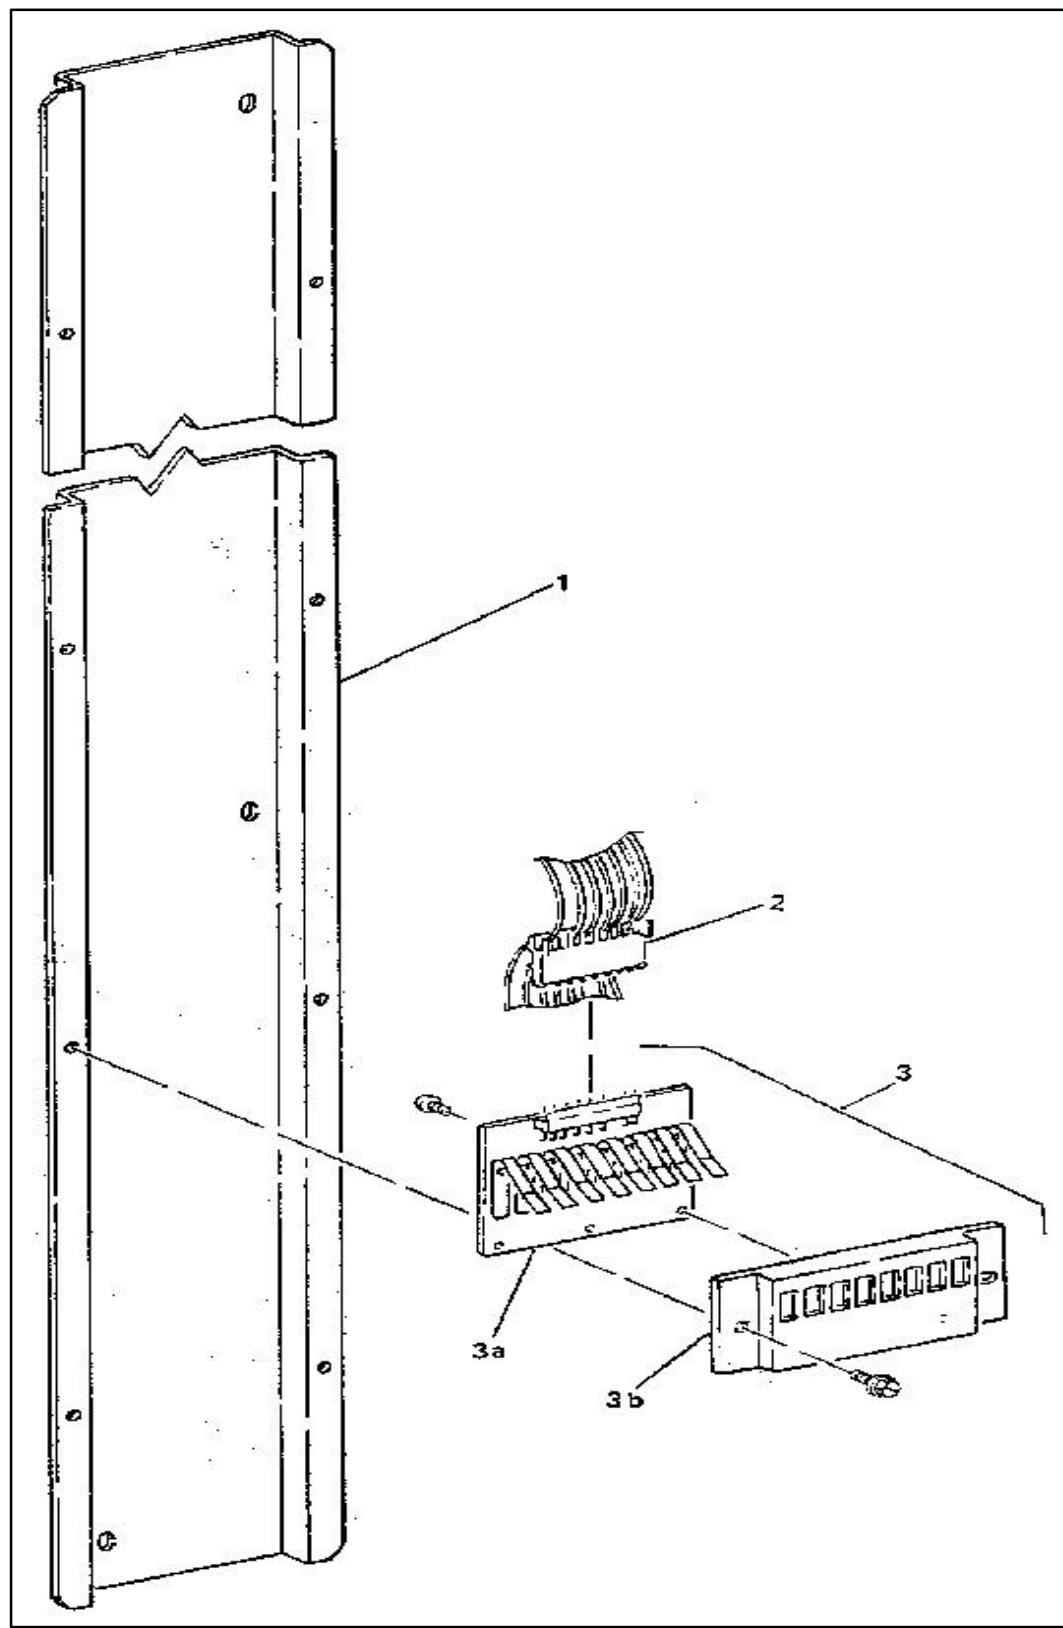

**Figure 4-9. Channel and Receptacle Block Assembly**

## SNACKTRON 1

Index No.	Description	Part Number	Note*	No. Req.
	Channel and Receptacle Block Assembly See Figure/Index 4-2/30 next higher assembly	1451062	ACTIVE	Ref
1	Mounting Receptacle Channel	1451063	OBS	1
2	Cabinet Harness	1451075	ACTIVE	1
3	Receptacle Block and P/C Board Assembly attaching parts No.8-32 x .31 Hex Hd. T/F Black Screw	1451064	OBS	6
3a	PCB and Contact Spring Assembly attaching parts No.6-20 x 3/8 PHS T/C Screw	1451097 1451049 9900203	ACTIVE OBS ACTIVE	12 6 30
3b	Receptacle Block	1451065	ACTIVE	6

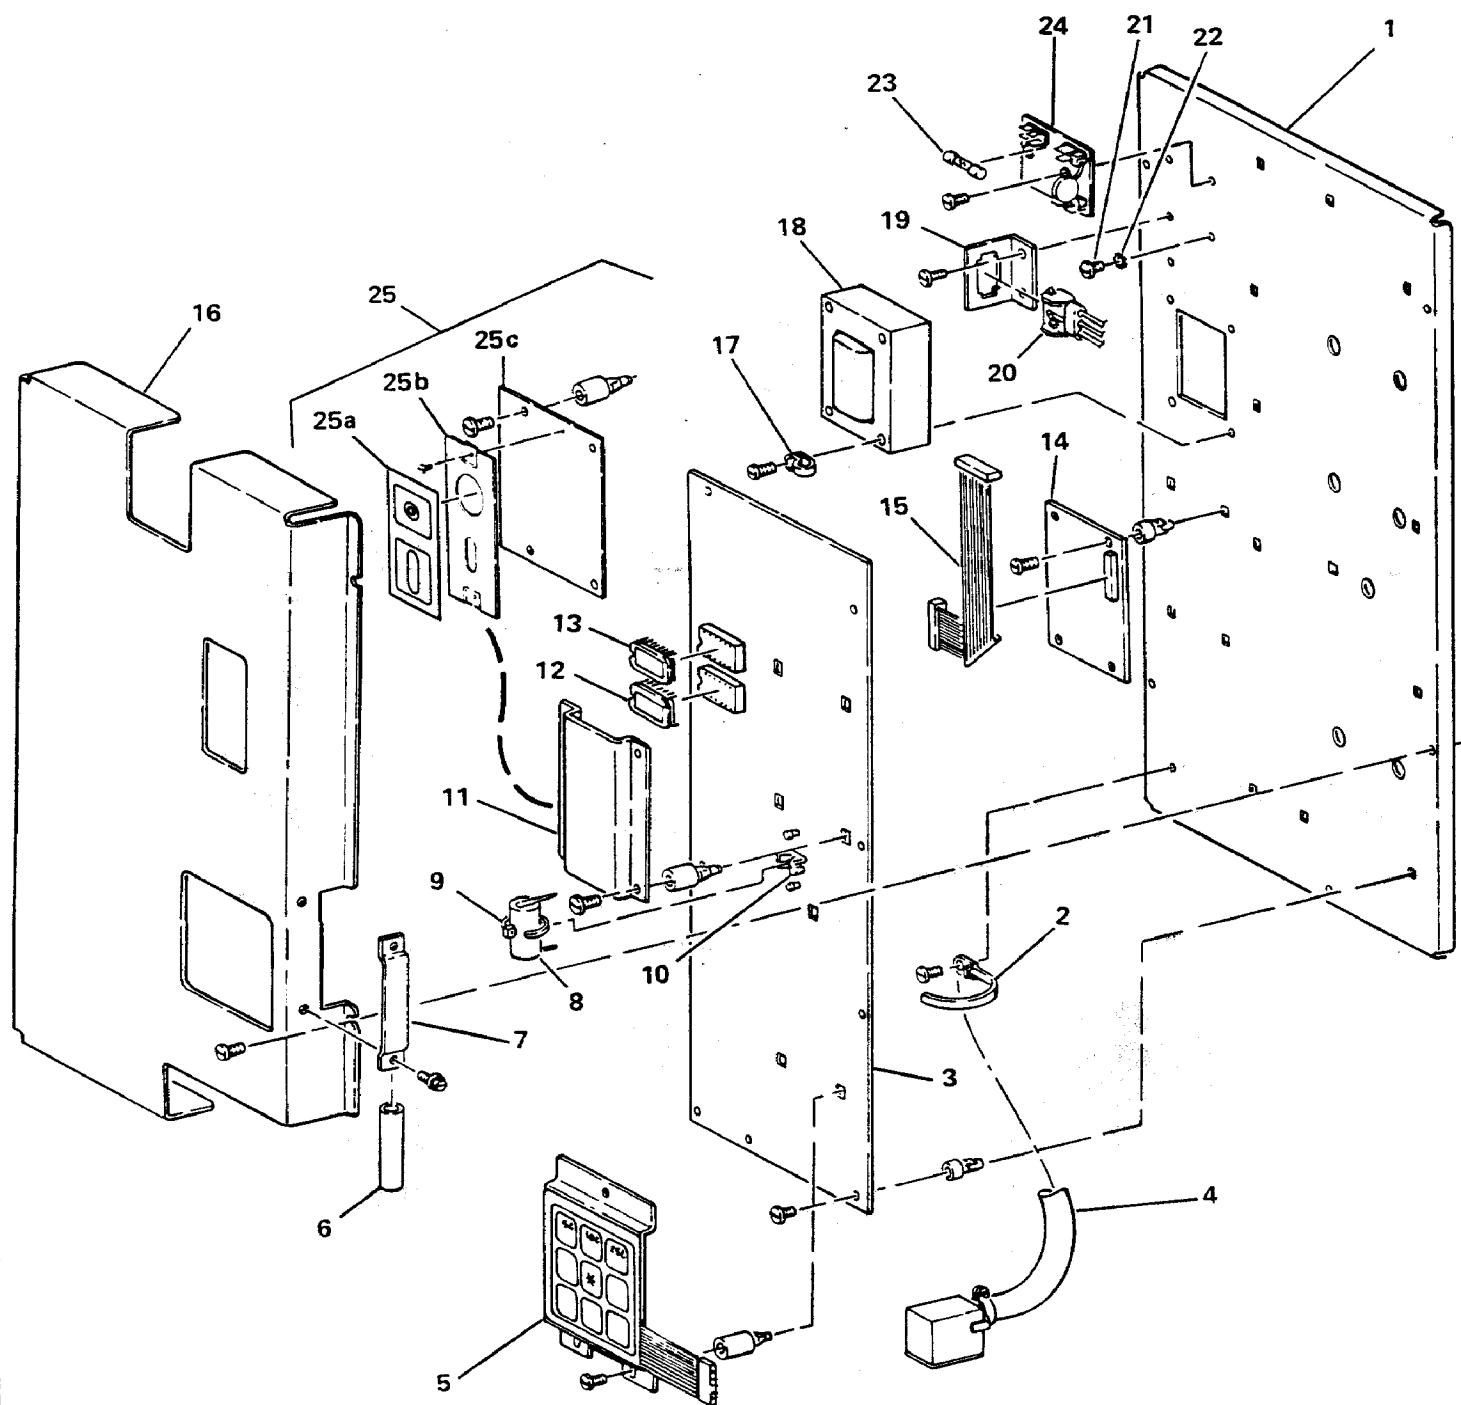


Figure 4-10. Controller PCB and Component Assembly

Index No.	Description	Part Number	Note*	No. Req .
	Controller PCB & Component Assembly - Mars (See Figure/Index 4-2/10 next higher assembly)	1451045	RB1451230	Ref.
1	P/C Board Chassis	1451107	ACTIVE	1
2	Wire Tie attaching part Screw No.8-32 x 31 Hex Md. T/F Black	5230618	RB4751060	1
3	Controller PCB Assembly attaching part Screw No.8-18 x .500 PHS Plastic Expansion - Nut - .250 Spacer	1451097	ACTIVE	1
4	Harness - Coin Mechanism - Interface -- Mars	1451120	ACTIVE	1
5	Membrane and Plate Assembly attaching parts Screw No.8-18 x 1.250 PHS Plastic Fastener - .687 Spacer	1451100	ACTIVE	1
6	Cover Clamp	1451043	ACTIVE	1
7	Clamp - Wire attaching part Screw No.8-32 x .31 Hex Md. T/F Black	1451042	ACTIVE	1
8	Battery - Lithium - 3V Size 2/39	9989317	OBS	1
9	Wire Tie - Self Clinching - Medium	2204513	ACTIVE	1
10	Tie Mount - Cable attaching parts Screw No.6-32 x 1/4 RHS Nut	9989327	ACTIVE	1
11	Channel - Backup - Cover (on 1451035) attaching parts Screw No.8-18 x 1.250 PHS Plastic Fastener - .687 Spacer	1451109	OBS	1
12	IC - MOS - EPROM - PROGRAMMED (U3)	1451132	RB1451386	1
13	IC MOS EPROM - PROGRAMMED (V2)	1451131	RB1451385	1
14	PCB Assembly - Coin Mach. INTERFACE - MARS attaching parts Screw No.8-18 x .500 PHS Plastic Expansion Nut - 250 Spacer	1451105	ACTIVE	1
15	Cable Assembly - 12 Pos. Ribbon Wire	1451117	ACTIVE	1

**SNACKTRON 1**

<b>Index No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Note*</b>	<b>No. Req.</b>
16	Cover - Control Panel attaching part Screw No.8-32 x .31 Hex Hd. T/F Black	1451084 1451097	OBS ACTIVE	1 4
17	Wire Clamp - .302 Dia. (on 1451034 & 1045)	2221049	ACTIVE	1
18	Transformer Assembly attaching part Screw No.8-32 x 1.25 Hex Hd. T/F	1451076	RB9989013	1 4
19	Bracket - Chassis attaching part Screw No. 8-32 x .31 Hex Hd. T/ F Black	1451110 1451097	ACTIVE	1 2
20	Jumper - Power to Transformer	1451125	ACTIVE	1
21	Screw (For Ground)	9900173	ACTIVE	1
22	Washer (Next to Chassis)	6131148	ACTIVE	1
23	Fuse 3/4 Amp	1451141	ACTIVE	1
24	Terminal Board Assembly attaching part Screw No.8-32 x .31 Hex Hd. T/F Black Controller PCB & Component Assembly - Mars (Data, Retrieval) Controller PCB & Component Assembly - CA Controller PCB & Component Assembly - CA (Data Retrieval)	1451127 1451097 1451034? 1451035? 1451036?	RB1451206 ACTIVE RB1451230 RB1451230 RB1451230	1 2 Ref Ref Ref
25	PCB & Panel Assembly - Data Retrieval	1451126	ACTIVE	1
25a	Label - Data Retrieval	1451119	OBS	1
25b	Panel - PCB - Data Retrieval attaching part Screw No.6-32 x 1/4 RHS	1451111 9900003	OBS ACTIVE	1 2
25c	PCB Assembly - Data Retrieval	1451103	OBS	1

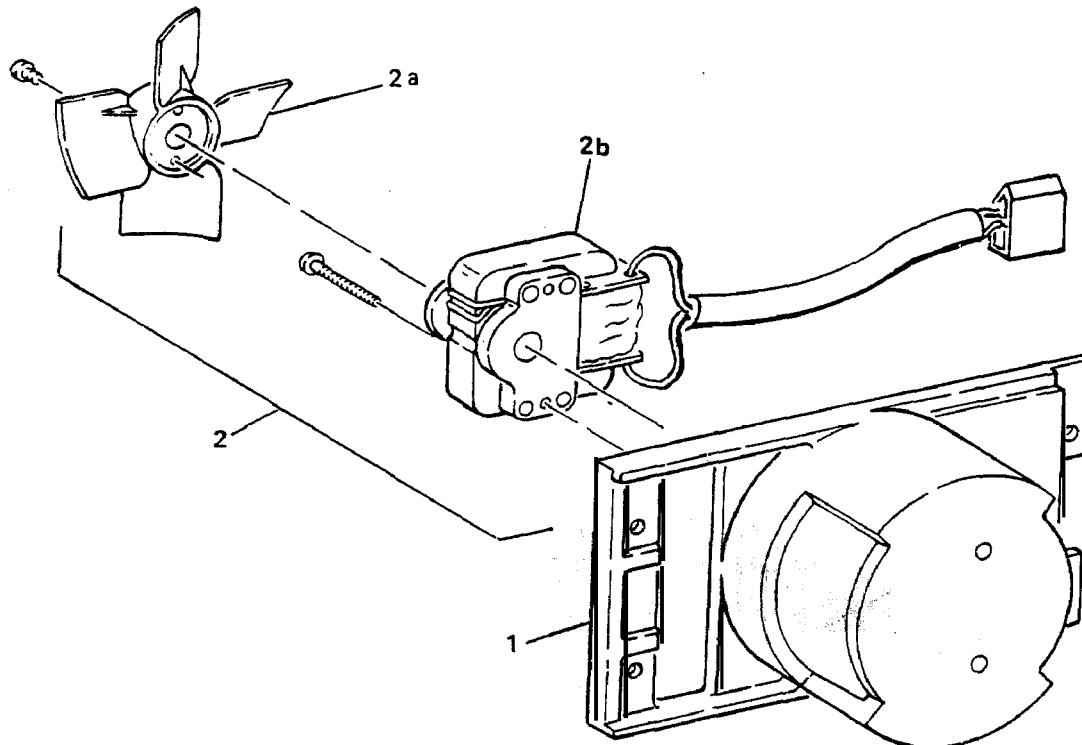


Figure 4-11. Fan and Housing Assembly

Index NO.	Description	Part Number	Note*	No. Req .
	Fan and Housing Assembly (See Figure/Index 4-2/3 next higher assembly)	1451088	ACTIVE	Ref
1	Fan Housing	1450189	OBS	1
2	Exhaust Fan Motor and Blade Assembly	1451090	OBS	1
2a	Exhaust Fan Blade attaching parts No.3-48 x .25 BHS Screw	1451092 1411192	ACTIVE ACTIVE	1 2
2b	Exhaust Fan Motor attaching parts No.10-32 x 5/8 RHS Screw	1451091 1277102	OBS ACTIVE	1 2

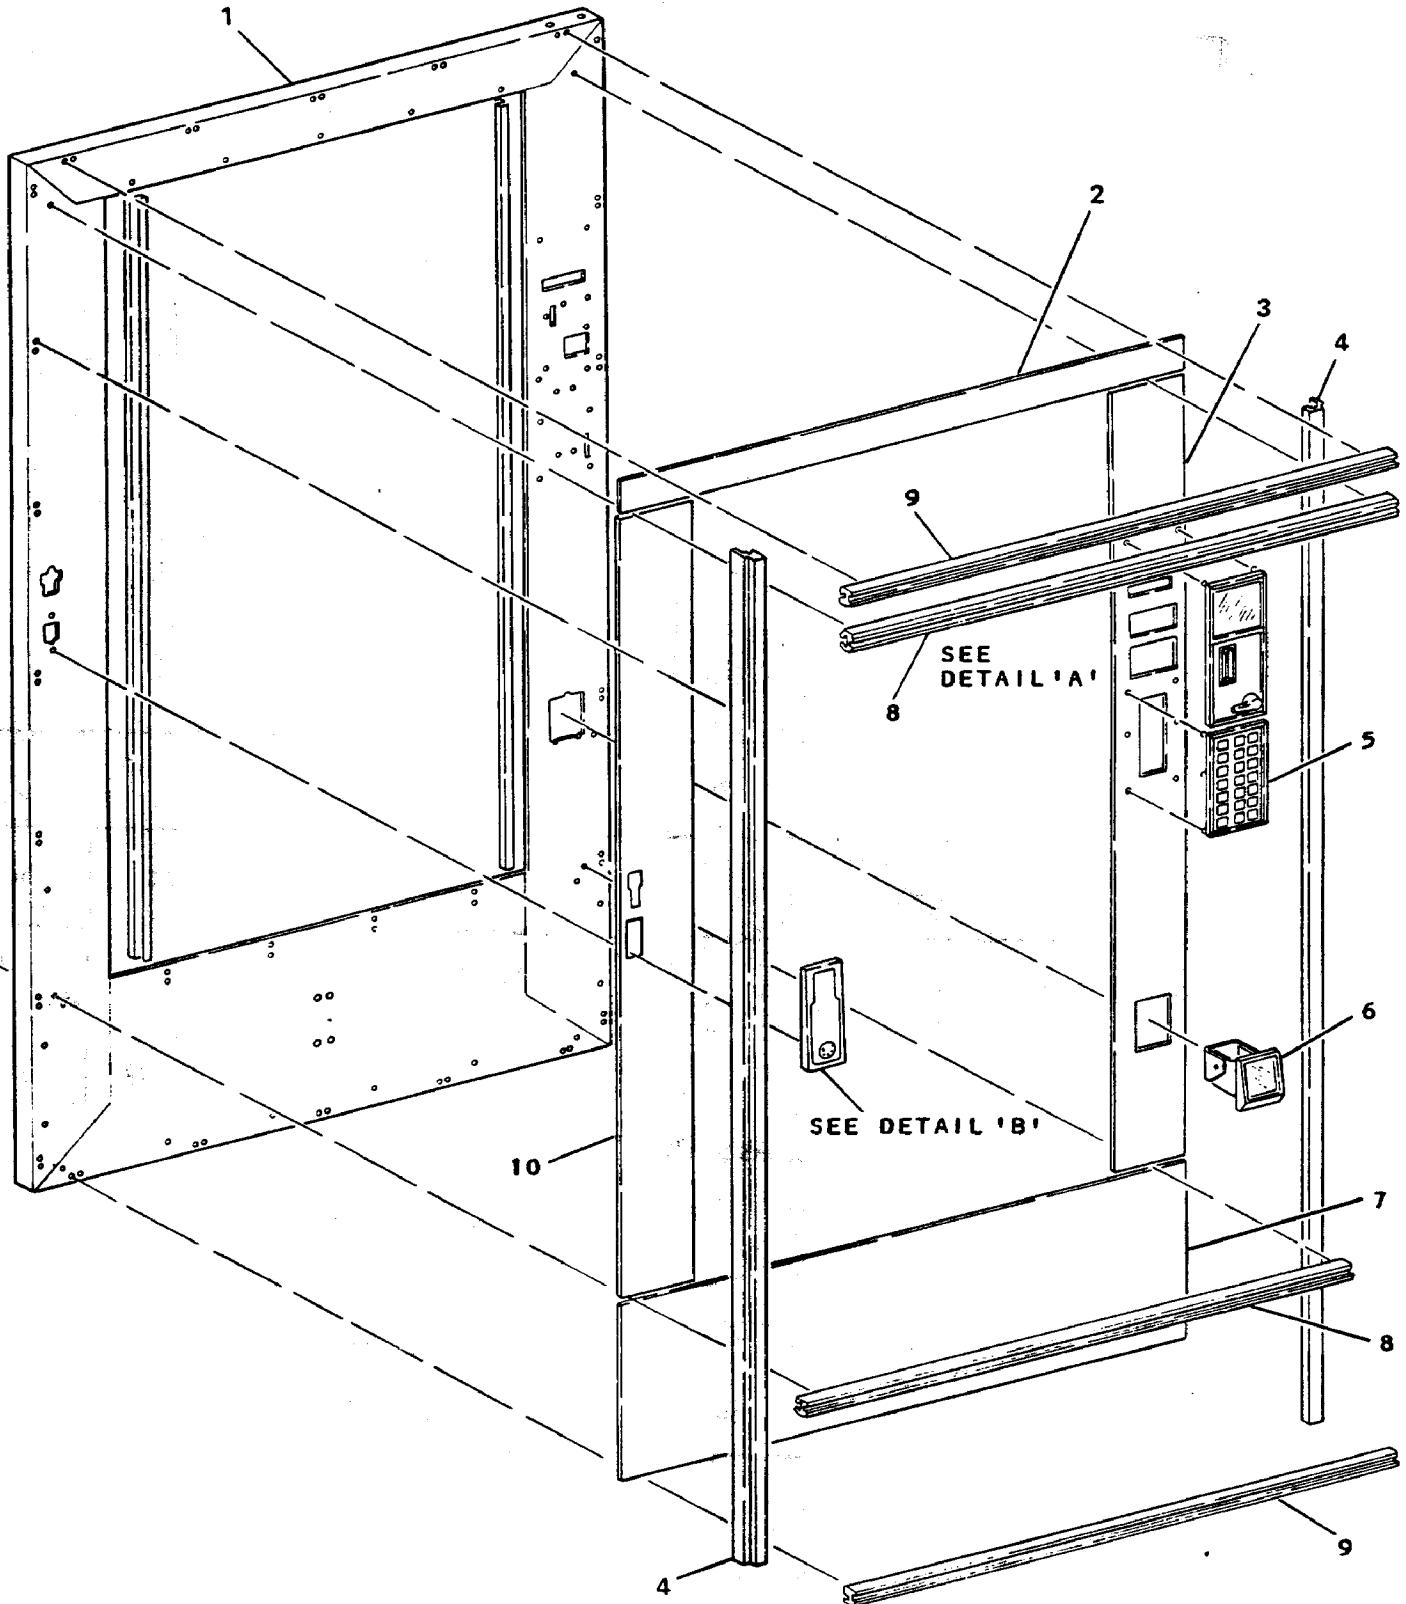


Figure 4-12. Door Assembly (1 of 3)

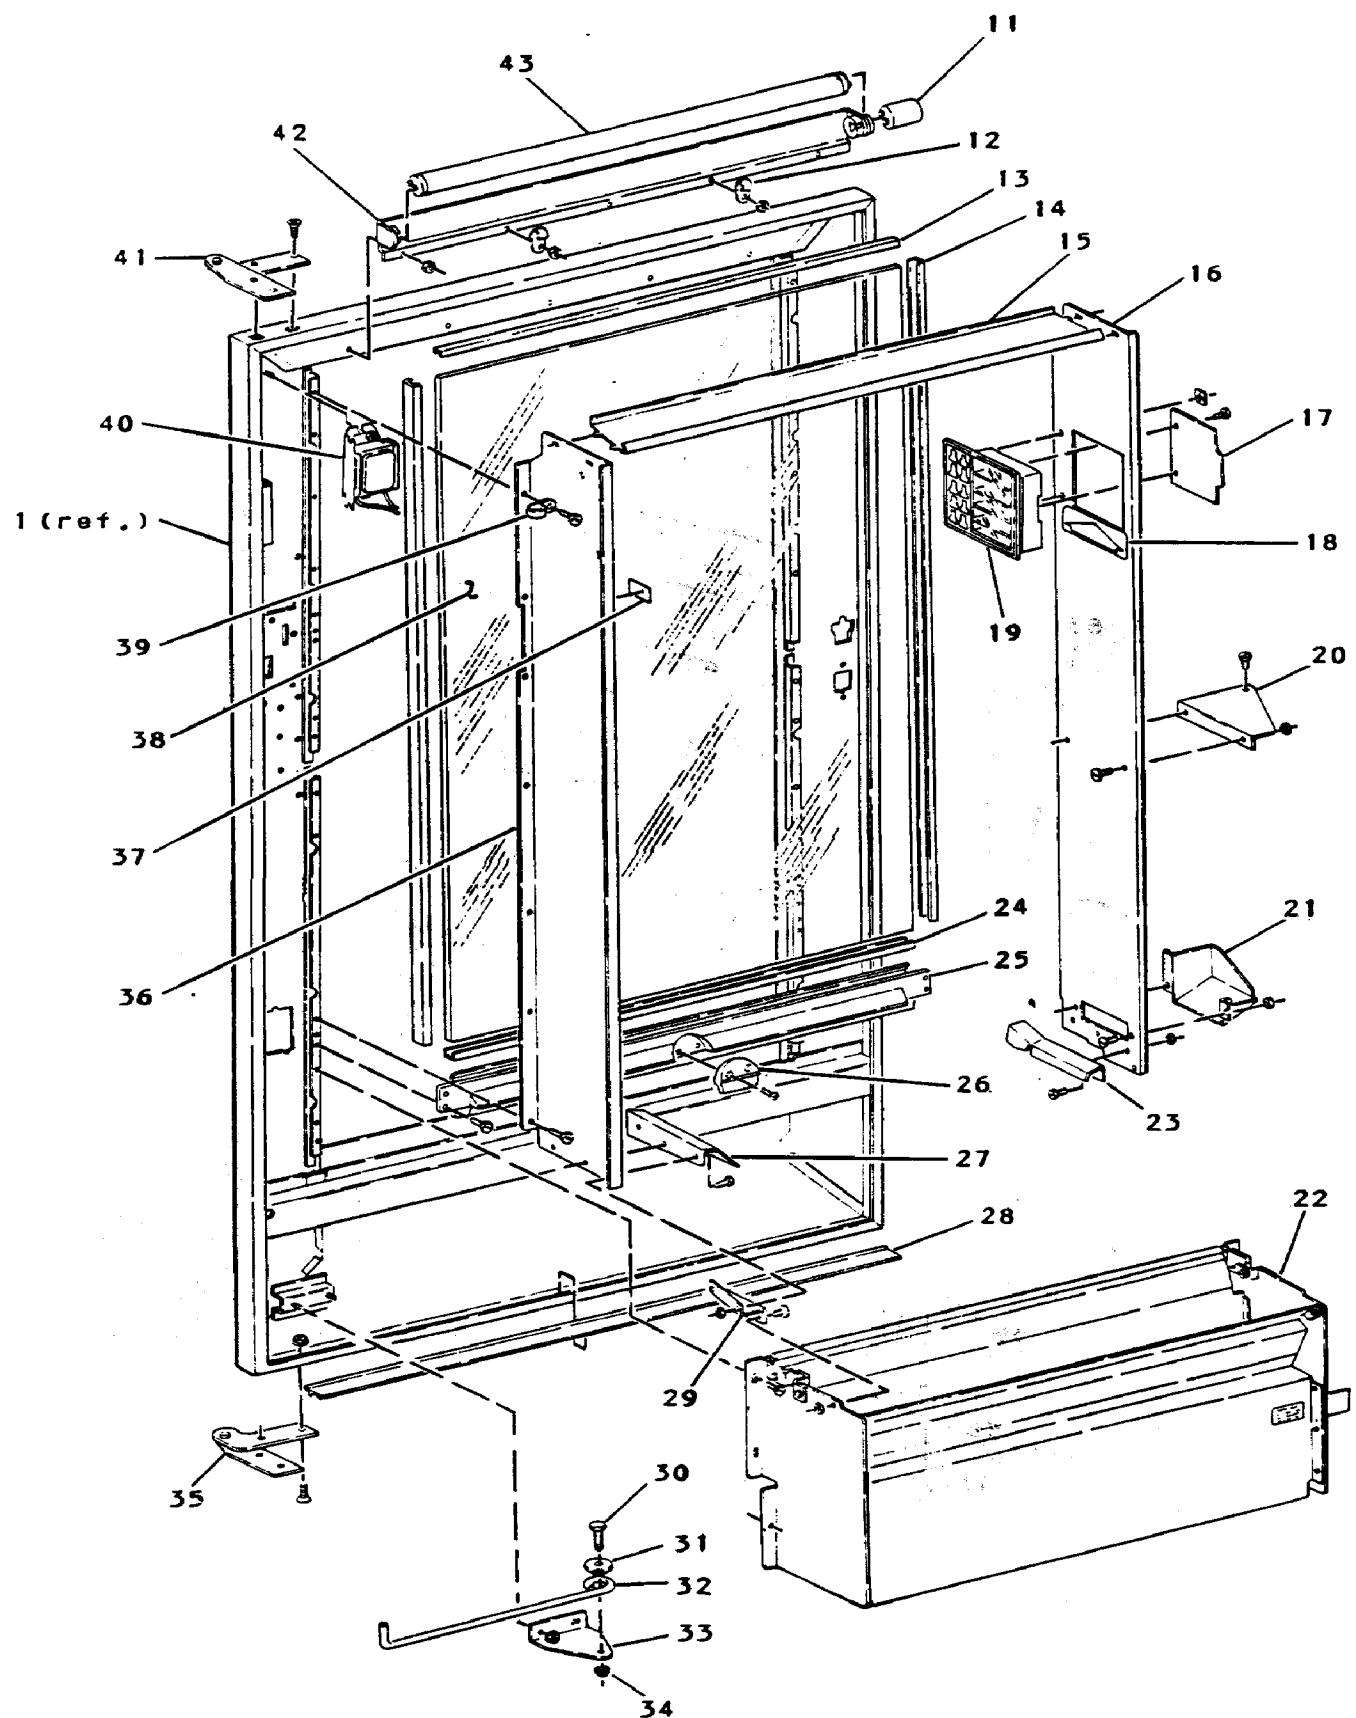


Figure 4-12. Door Assembly (2 of 3)

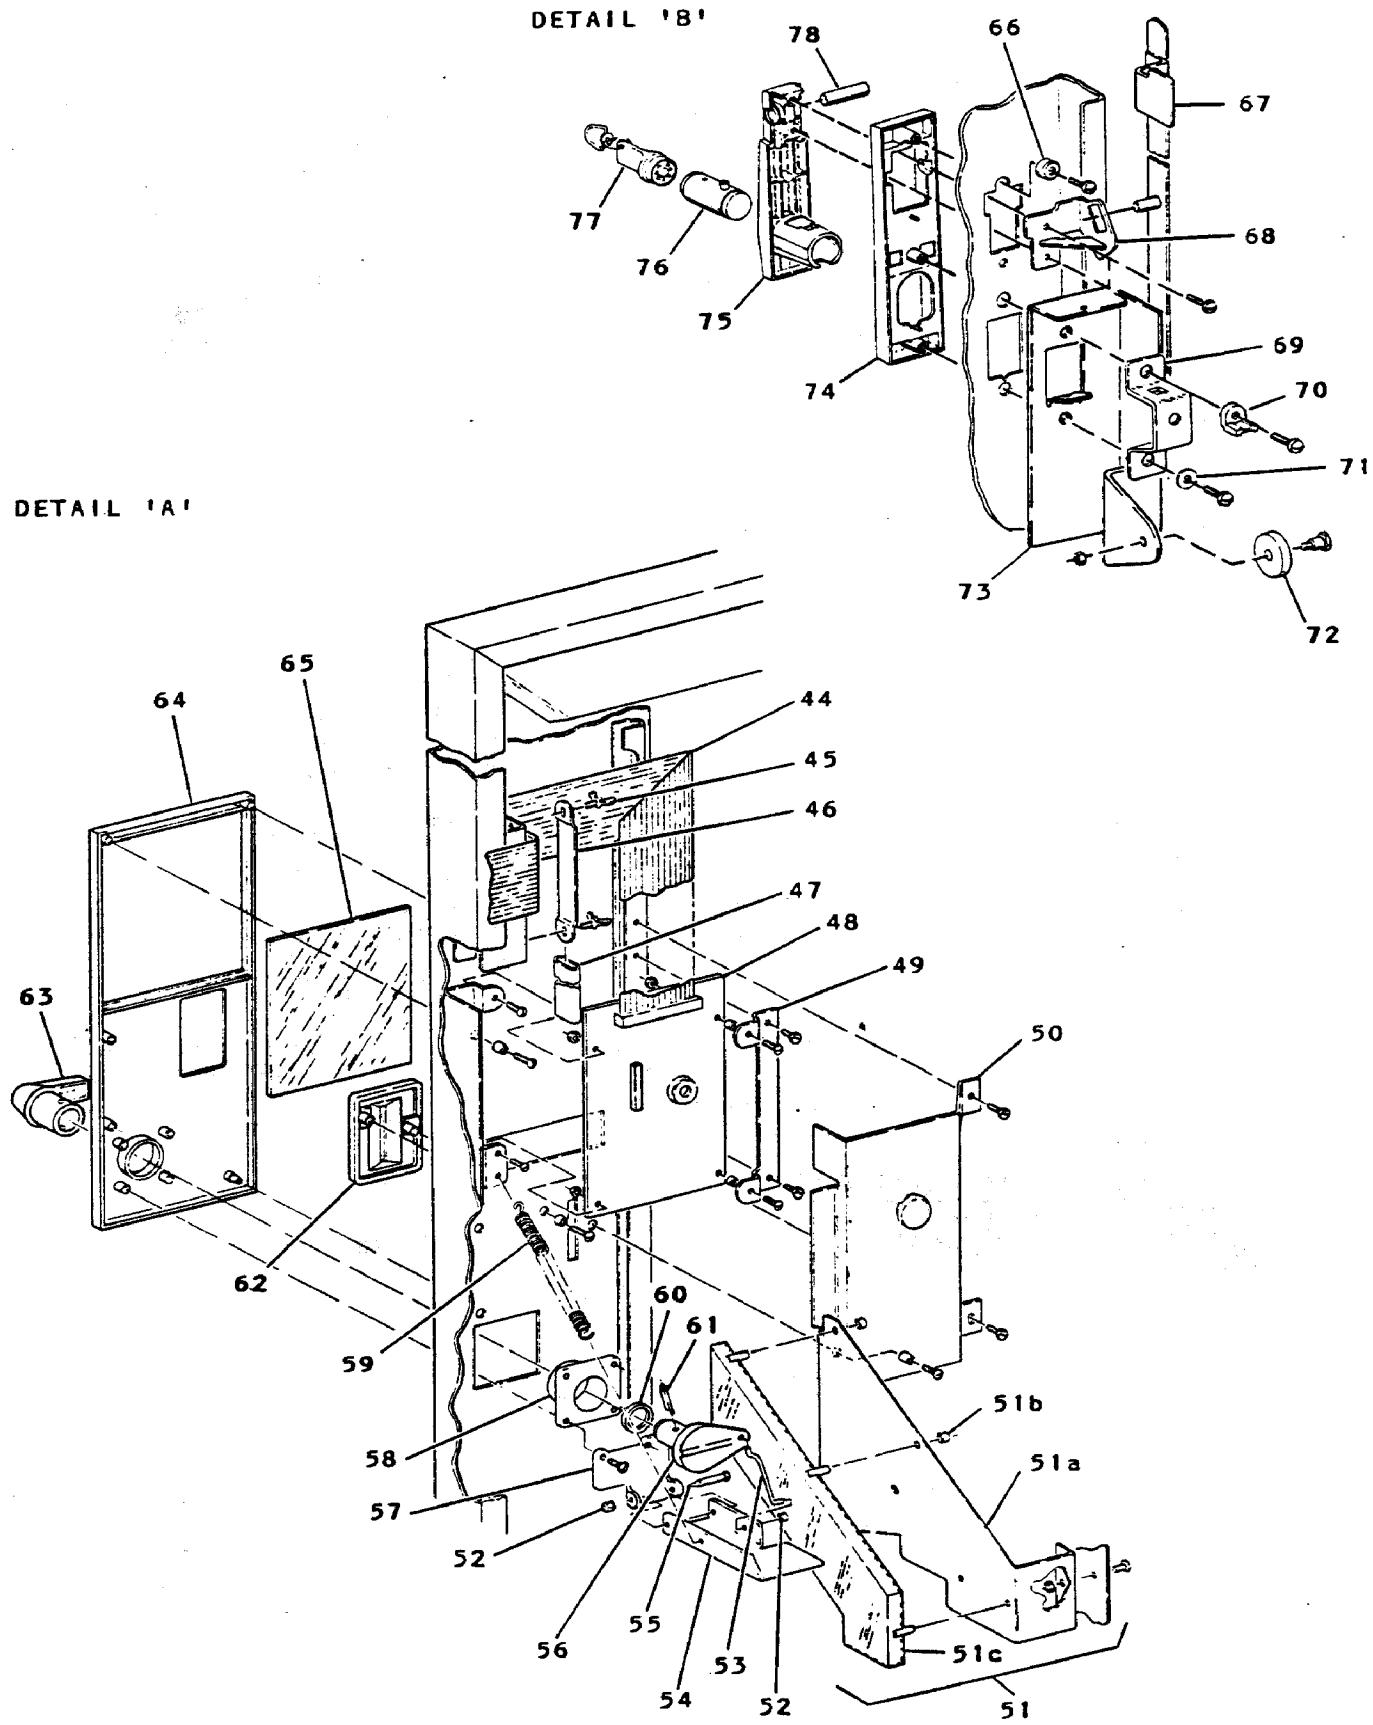


Figure 4-12. Door Assembly (3 of 3)

**SNACKTRON 1**

<b>Index No .</b>	<b>Description</b>	<b>Part Number</b>	<b>Note*</b>	<b>No. Req.</b>
	Door Assembly - Final Imperial Crown See Figure/Index 4-1/2 for next higher' Assembly	1452021	OBS	Ref
1	Door Assembly	1452302	OBS	1
2	Panel - Top Trim Presidential Walnut Optional Trim Panel - Top Blank - Walnut Trim Panel - Top Blank - Enameled Trim Panel - Top Formica - Laminated Trim Panel - Top Blank - Honey Tone Teak/Vinyl Trim Panel - Top Blank - Regency Walnut Vinyl Trim Panel - Top Blank - Rosewood Vinyl Trim Panel - Top Blank - Stainless Trim Panel - Top Blank - Blue Fleece Trim Panel - Top Blank - Green Fleece Trim Panel - Top Blank - Yellow Fleece	1452062 1452115 1452116 1452117 1452118 1452119 1452120 1452121 1452122 1452123 1452124	ACTIVE ACTIVE ACTIVE ACTIVE OBS ACTIVE ACTIVE ACTIVE OBS OBS OBS	1 1 1 1 1 1 1 1 1 1 1
3	Panel - R.H. Trim-Port-Au-Prince Optional Trim Panel - Right - Presidential Walnut Trim Panel - Right - Enameled Trim Panel - Right - Stainless Trim Panel - Right - Formica - Laminated Trim Panel - Right - Honey tone Teak Vinyl Trim Panel - Right - Regency Walnut Vinyl Trim Panel - Right - Rosewood Vinyl	1452065 1452132 1452133 1452134 1452135 1452136 1452137 1452138	ACTIVE ACTIVE OBS OBS OBS OBS OBS RB1452321	1 1 1 1 1 1 1 1
4	Trim - Door Side attaching parts No.6 x 7/16 RHS Screw - Sheet Metal	1302049 1302282	OBS ACTIVE	2 14
5	Push Button Grip Assembly See Figure 4-13	1452024	ACTIVE	1
6	Coin Receptacle Assembly See Figure 4-14	1452030	ACTIVE	1
7	Panel - Bottom Trim - Presidential Walnut Panel - Bottom Trim - Slate Vinyl	1452063 1452213	ACTIVE ACTIVE	1 1
8	Horizontal Door Trim Assembly attaching parts "T" Bolt - Trim-3/4 (Trim and Light Bracket) "T" Bolt - Trim-3/4 (Trim Top and Bottom ) Nuts No.8-32 W/LW (Top and Bottom Trim to Door)	1302408 2222031 2222110 9900081	ACTIVE ACTIVE ACTIVE ACTIVE	2 5 8 13
9	Top and Bottom Door Trim Assembly attaching parts No.6 x 7/16 RHS Screw Sheet Metal	1302407 1302282	ACTIVE RBG1472028	2 10

## SNACKTRON 1

Index No.	Description	Part No.	Note*	No. Req.
10	Panel - L.H. Trim Port-Au-Prince Optional Trim Panel Left - Presidential Walnut Trim Panel Left - Enameled Trim Panel Left - Stainless Trim Panel Left - Formica - Laminated Trim Panel Left - Honey tone Teak Vinyl Trim Panel Left - Regency Walnut nut Vinyl Trim Panel Left - Rosewood Vinyl Trim Panel Left - Pewter Vinyl	1452064 1452125 1452126 1452127 1452128 1452129 1452130 1452131 1452212	ACTIVE RB1452082 ACTIVE ACTIVE OBS ACTIVE OBS OBS OBS	1 1 1 1 1 1 1 1 1
11	Starter - Fluorescent Light FS-25	2302218	ACTIVE	1
12	Retainer - Harness	1452139	ACTIVE	2
13	Channel - Glass - Horizontal	1172041	ACTIVE	1
14	Channel - Glass - Vertical	1452068	ACTIVE	2
15	Shield - Light	1452145	ACTIVE	1
16	End Plate - Display - L.H. attaching part Screw No.8-32 x .31	1452066	RB1452158	1
17	Cover - Gum & Mint Display attaching parts Screw No.8-32 x .31 Hex Hd. T/F Black	1452216	ACTIVE	1
18	Label Arrow Gum & Mint	1459023	ACTIVE	1
19	Insert & Display Assembly - Gum & Mint attaching parts Push-On Retainer-3/16	1452038	ACTIVE	1
20	Gusset - Display End Plate - L.H. attaching parts Screw No.8-32 x 3/8 THS - Black Screw No.8-32 x .31 Hex Hd. T/F Black	1452045	ACTIVE	1
	Nut No.8-32 W/L.W.	1170206 1451056 9900081	ACTIVE RB9900106 ACTIVE	2 1 2
21	Cup - Chute - Gum & Mint attaching parts Screw Flat Head Nut	1452077	ACTIVE	1
22	Delivery Pan Assembly See Figure 4-15 attaching parts Screw No.8-32 x .31 Hex Hd. T/F Black	1452100 1451097	OBS ACTIVE	1 6

## SNACKTRON 1

Index No.	Description	Part No.	Note*	No. Req.
(23)	Deflector (Product) L.H. attaching parts	1452047	ACTIVE	1
24	Screw No.8-32 x .31 Hex Hd. T/F Black	1451097	ACTIVE	3
25	Channel - Glass - Lower	1402120	ACTIVE	1
	Panel - Glass Lower	1412012	OBS	1
	attaching parts			
	Screw No.8-32 x .31 T/F Black	1451097	ACTIVE	4
26	Retainer Door Pivot	1452072	ACTIVE	1
	attaching parts			
	Screw No.8-32 x .31 Hex Hd. T/C	1451056	RB9900106	2
(27)	Deflector - Product R.H. attaching parts	1452046	ACTIVE	1
	Screw No.8-32 x .31 Hex Hd. T/F Black	1451097	ACTIVE	3
28	Strip - Filler - Sanitation	6132415	OBS	1
(29)	Support End Plate R.H. attaching part	1452067	ACTIVE	1
	Screw No.8-32 x 3.8 THS Black	1170206	ACTIVE	1
	Nut No.8-32W/L.W.	9900081	ACTIVE	1
30	Bolt, Main Shaft-Hex	1106657	ACTIVE	1
31	Bushing, Door Check	1142017	ACTIVE	1
(32)	Arm, Door Check	1452056	ACTIVE	1
(33)	Plate, Door Check attaching parts	1452055	ACTIVE	1
	Nut No.1/4-20Keps" Conical Serrated Washer Ad.	1172021	ACTIVE	2
34	Nut, No.1/4-20 "Keps" Conical Serrated Washer Ad.	1172021	ACTIVE	1
35	Hinge Assembly - Lower Door attaching parts	3102058	RB3122207	1
	Screw No.1/4 - 20 x 5/8 Flat Ad	1172020	RB1472262	
	Nut No.1/4 - 20 "Keps" Conical Serrated Washer Ad.	1172021	ACTIVE	1
36	End Plate -Display R.H. attaching parts	1452048	OBS	1
	Screw No.8-32 x .31 Hex Ad. T/F Black	1451097	ACTIVE	1
37	Label Model Designation	1452079	RB1472262	1
38	Glass - Display Optional	1452059	ACTIVE	1
	Glass Display - Plexiglas	1452080	OBS	1
	Glass Display - Lexan	1452210	ACTIVE	1

**SNACKTRON 1**

<b>Index No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Note*</b>	<b>Req. No.</b>
39	Cable Clamp - 7/16	3102348	ACTIVE	1
40	Ballast Assembly - Display attaching part	6152188	ACTIVE	1
41	Nut No. 8-32W/LW Hinge Assembly - Upper Door attaching parts Screw No.1/4-20 x 5/8 Flat Hd. Nut No. 1/4-20 "Keps" Conical Serrated Washer	9900081 3102055 1172020 1172021	ACTIVE ACTIVE RB1472262 ACTIVE	1 1 2 2
42	<b>Light Assembly - Upper Door</b> See Figure 4-16 attaching parts Nut No .8-32W/L.W.	1452033	ACTIVE	1
43	Fluorescent Lamp - 25 Watt	9900081	ACTIVE	5
44	<b>Cable Assembly - Ribbon</b>	1172115 1452075	ACTIVE ACTIVE	1 1
45	Thumb Screw	4021056	RB2206028	2
46	Clamp - Wire	1451042	ACTIVE	1
47	Cover Clamp	1451043	ACTIVE	1
48	<b>PCB Assembly - Display #1</b> attaching parts Screw No.8-32 x .31 Hex Hd. T/F Black	1452073	RB9989803	1
	Nut No.8 W/LW	1451097	ACTIVE	
	Spacer	9900081	ACTIVE	4
49	Bracket - PCB Board attaching parts Screw No.8-32 x .31 Hex Hd. T/F Black	2302053 1452070	ACTIVE OBS	2 1
50	<b>Cover - Display - PCB Assembly</b> attaching parts Screw No.8-32 x .31 Hex Hd. T/F Black	1451097 1452017	ACTIVE ACTIVE	2 1
51	<b>Plate and Coin Chute Assembly - Upper</b>	1451097	ACTIVE	2
51a	<b>Plate - Coin Chute</b> attaching parts Screw No.8-32 x 3/8 THS Black	1452084 1452086	ACTIVE ACTIVE	1 1
	Nut No.8-32W/L.W.	1170206	ACTIVE	1
51b	Speed Clip- Compression Ring	9900081	ACTIVE	1
51c	Chute - Coin	2366055 1452085	ACTIVE	6 1


## SNACKTRON 1

Index No.	Description	Part Number	Note*	No. Red.
52	Speed Clip - Compression Ring	2366055	ACTIVE	2
53	Link - Scavenger	1452054	ACTIVE	1
54	Arm - Scavenger	1452053	ACTIVE	1
55	Latch Pin	1127837	ACTIVE	1
56	Cam Scavenger	1452060	ACTIVE	1
57	Bracket - Scavenger Pivot attaching parts	1452052	ACTIVE	1
	Screw No.8-32 x .31 Hex Hd. T/C	1451056	RB9900106	2
58	Bearing - Scavenger	1402014	ACTIVE	1
59	Spring - Scavenger Pivot	1144014	ACTIVE	1
60	Washer, Steel - 1.00 x -.567 x .060	1402054	ACTIVE	1
61	Pin - Cotter	9900098	ACTIVE	1
62	Coin Insert attaching parts	1452061	RB1472223	1
	Spacer Cup	2302053	ACTIVE	2
	Screw No.8-32 x .38 Hex Hd. T/F	1437204	ACTIVE	2
63	Handle - Scavenger	1402037	RB1452193	1
64	Casting - Scavenger and Readout attaching parts	1452050	ACTIVE	1
	Spacer Cup	2302053	ACTIVE	5
	Screw No.8-32 x .38 Hex Hd. T/F	1437204	ACTIVE	5
65	Insert - Instruction	1452022	ACTIVE	1
66	Spacer, Cup	1302289	ACTIVE	1
67	Lock Bar and Stud Assembly - L.H.	1452018	ACTIVE	1
68	Actuator Lock Bar - L.H.	1452013	ACTIVE	1
69	Catch, Door Latch	3112195	ACTIVE	1
70	Shield, Latch attaching part	1302326	ACTIVE	1
	No.10-32 x 1/2 RHS W/LW	1217161	RB9900170	Ref
71	Washer, Steel, 7/16 x .203 x .062	9900067	ACTIVE	1
72	Roller, Door attaching parts	1452058	ACTIVE	1
	No.10-32 Self Locking Nut Bolt	1407048	RB9900206	1

**SNACKTRON 1**

<b>Index No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Note*</b>	<b>No. Req.</b>
73	Bracket - Door Roller	1452057	ACTIVE	1
74	Base - lever Lock attaching part No.10-32 x 1/2 RHS W/LW	1172191 1217161	ACTIVE RB9900170	1 3
75	Lever, Lock	1172190	ACTIVE	1
76	Cylinder, Flex-Ace Lock	9992000	ACTIVE	1
77	Key, Flex-Ace Lock  Key, Van Lock	9994000 3112164	RB9994400 ACTIVE	1 1
78	Pivot, Lever Lock	1302291	ACTIVE	1

## SNACKTRON 1

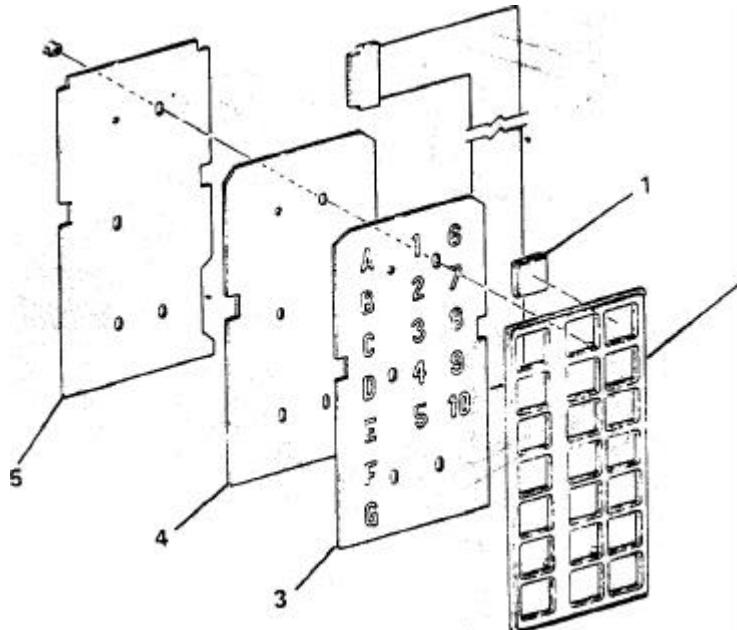

**Figure 4-13. Push Button Grid Assembly**

Index No.	Description	Part Number	Note*	No. Req.
1	<b>Push Button Grid Assembly</b> (See Figure/Index 4-12/5 for next assembly)	<b>1452024</b>	<b>ACTIVE</b>	<b>Ref</b>
1	Push Button Lens	1452027	1472251	21
2	<b>Push Button Grid</b> attaching parts Compression Ring Speed Clip	<b>1452026</b>	<b>ACTIVE</b>	<b>1</b>
3	<b>Push Button Letter Sheet</b>	2366055	ACTIVE	5
4	<b>P/C Membrane Switch Selection Assembly</b>	<b>1452028</b>	<b>RB9989428</b>	<b>1</b>
5	<b>Push Button Backup Plate</b>	<b>1452029</b>	<b>ACTIVE</b>	<b>1</b>
		<b>1452025</b>	<b>ACTIVE</b>	<b>1</b>

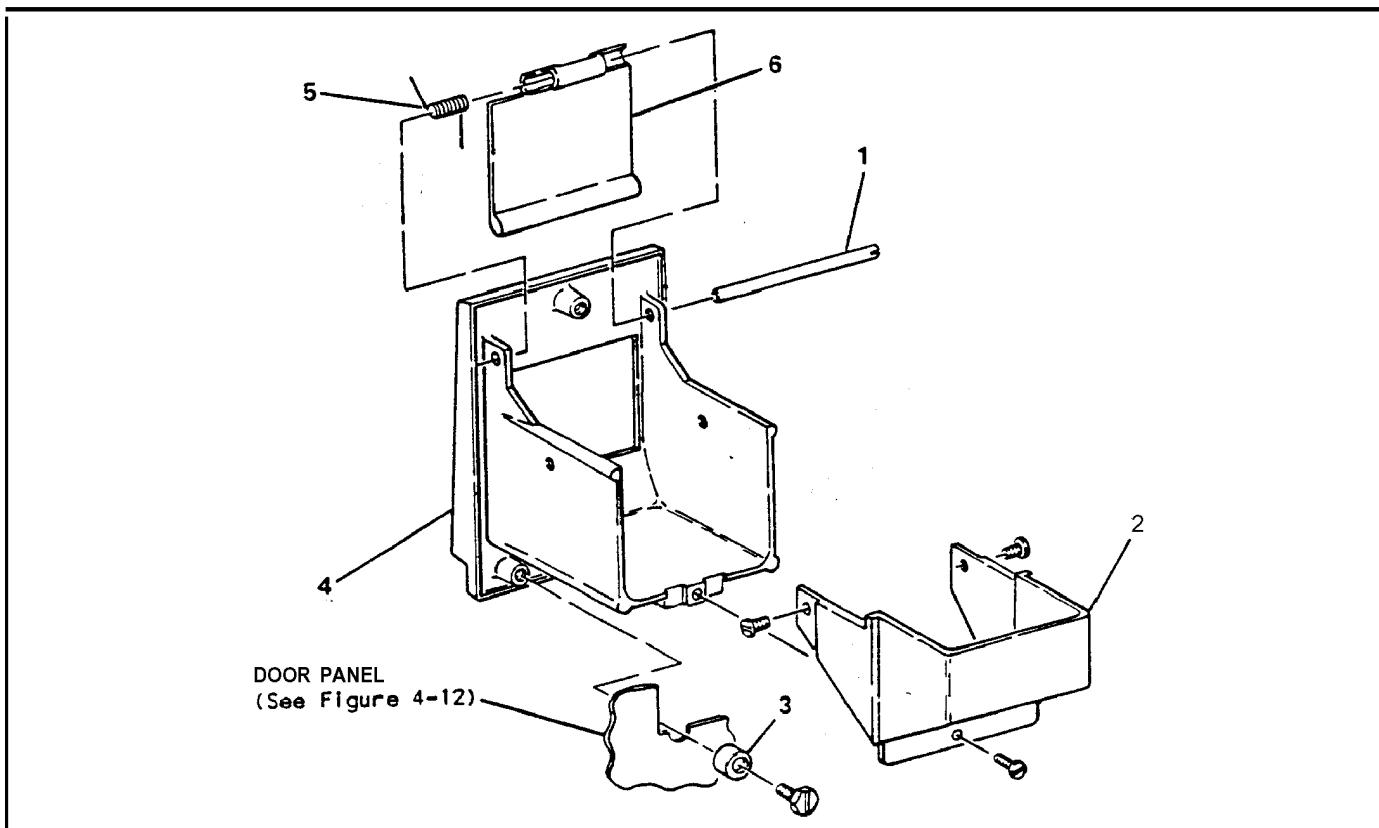


Figure 4-14. Coin Receptacle Assembly

Index	Description	Part #	Note*	No. Req.
	Coin Receptacle Assembly See Figure/Index 4-12/6 for next higher assembly)	1452030	ACTIVE	Ref
1	Pin - Gate	1272039	ACTIVE	1
2	End - Coin Cup attaching parts No.6-20 x 3/8 PHS T/C Screw	1452031	ACTIVE	1
3	Spacer, Cup	9900203	ACTIVE	3
4	Coin Receptacle attaching parts No.8-32 x 5/16 RHS T/C	2302053	ACTIVE	3
5	Spring, Coin Return Door	1272131	ACTIVE	1
6	Gate, Coin Receptacle	9900174	ACTIVE	1
		1212117	ACTIVE	1
		1272132	ACTIVE	1

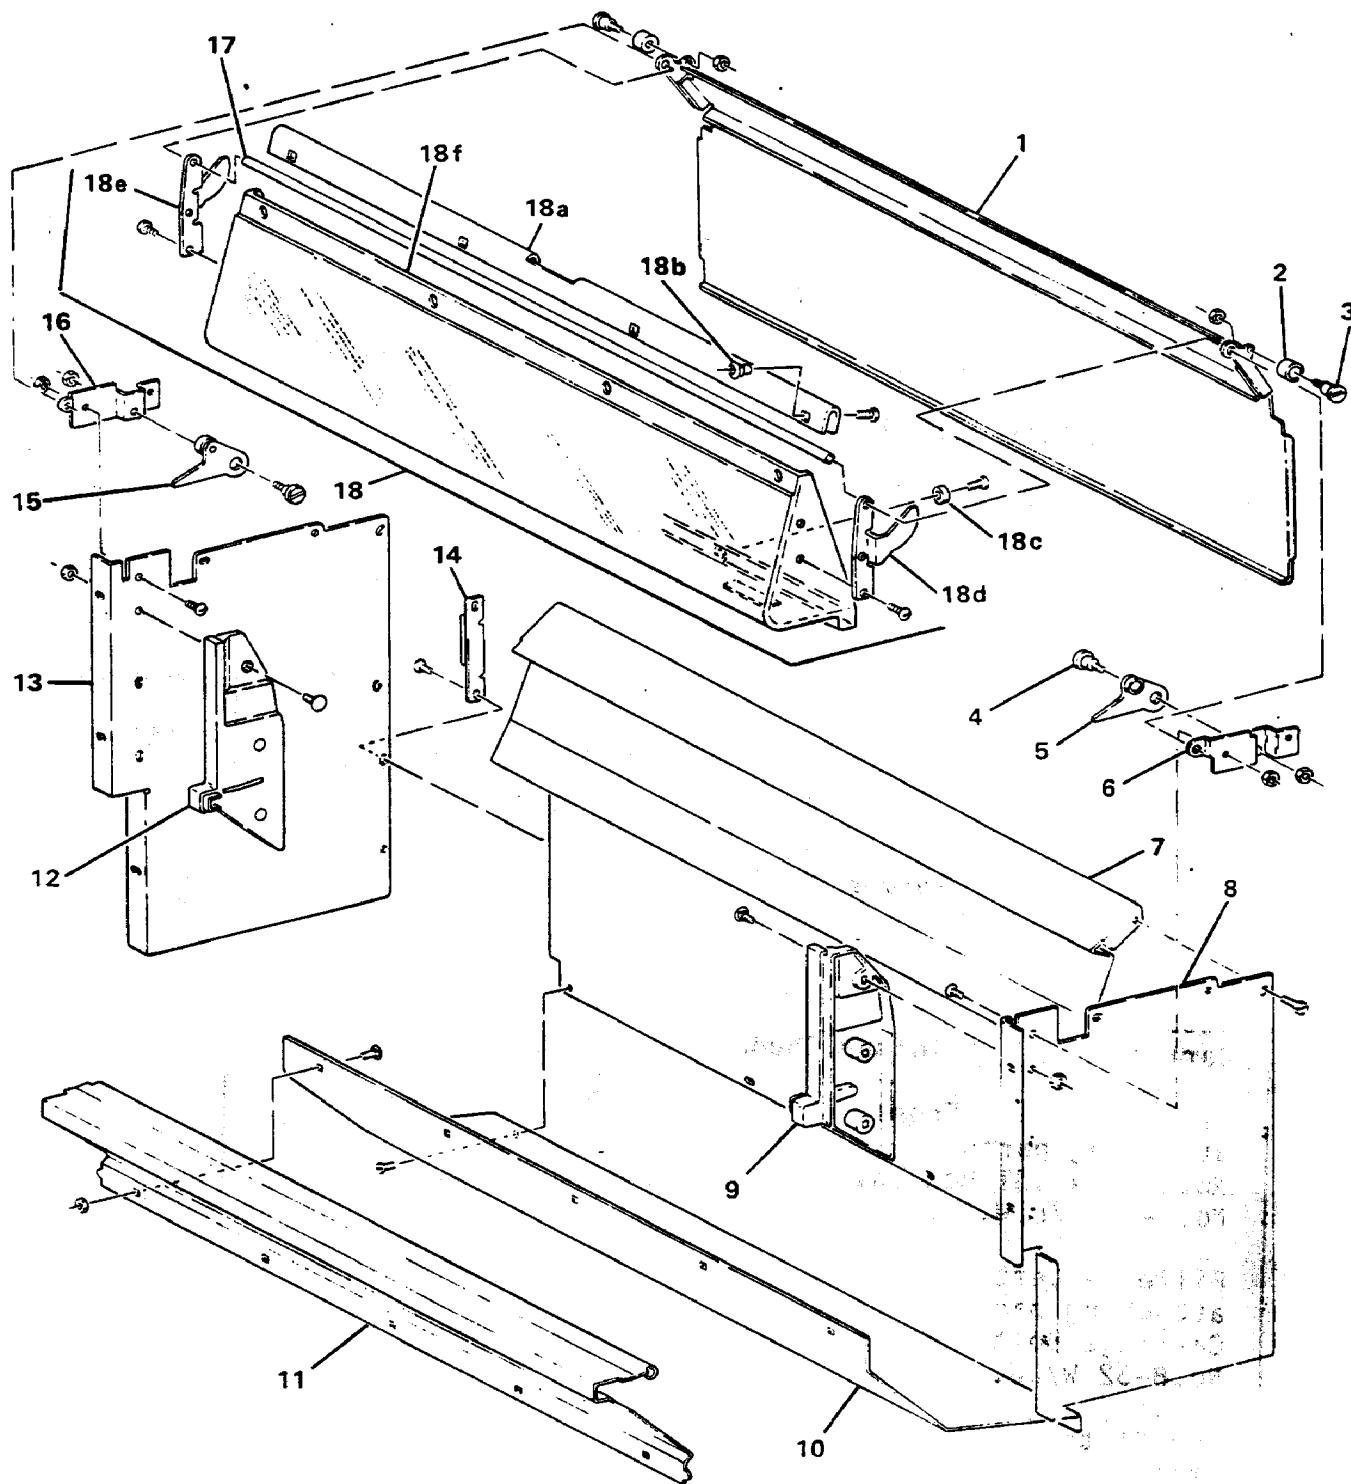



Figure 4-15. Delivery Pan Assembly

# SNACKTRON 1

Index No	Description	Part Number	Note*	No. Req.
	Delivery Pan Assembly See Figure/Index 4-12/22 for next higher assembly)	1452100	OBS	Ref
1	Pilferage Door & Channel Assembly	1412032	OBS	1
2	Roller - Door Actuator	1412089	ACTIVE	2
3	Stud - Door Actuator	1412090	ACTIVE	2
	attaching part			
	No.8-32 Self Locking Black Nut	1412046	ACTIVE	2
4	Stud - Actuator - Plate Pivot	1412045	ACTIVE	2
	attaching part			
	No. 10-32 Self f Locking Nut	1407048	RB9900206	2
5	Actuator Plate & Roller Assembly R.H.	1412094	RB1452141	1
6	Bracket - Door Pivot - R.H.	1412021	ACTIVE	1
	attaching part			
	No.8-32 x 3/8 THS Black Screw	1170206	ACTIVE	4
1	Back Panel - Delivery Pan	1452103	ACTIVE	1
8	End Plate - Delivery -Pan-R.H.	1452101	RB1452159	1
	attaching part			
	No.8-32 x .31 Hex Hd. T/F Black Screw	1451097	ACTIVE	4
9	Filler - Right	1412022	ACTIVE	1
	attaching parts			
	Carriage Bolt - Torque Channel	1306140	ACTIVE	3
	No.8-32 W/L.W. Nut	9900081	ACTIVE	3
10	Bottom Panel - Delivery Pan	1452105	ACTIVE	1
	attaching parts			
	Carriage Bolt - Torque Channel	1306140	ACTIVE	5
11	Delivery Pan - Front	1412061	ACTIVE	1
	attaching parts			
	No.8-32 x .31 Hex Hd. T/F Black Screw	1451097	ACTIVE	5
	No.8-32 W/L.W. Nut	9900081	ACTIVE	5
12	Filler - Left	1412023	ACTIVE	1
	attaching parts			
	Carriage Bolt - Torque Channel	1306140	ACTIVE	3
	No.8-32 W/LW.	9900081	ACTIVE	3
13	End Plate - Delivery Pan-L.H.	1452102	RB1452160	1
	attaching part			
	No.8-32 x .31 Hex Hd. T/F Black Screw	1451097	ACTIVE	4
14	Actuator - Interlock Switch	1452104	ACTIVE	1

# SNACKTRON 1

Index No.	Description	Part No.	Note*	No. Req.
15	Actuator Plate & Roller Assembly L. H.	1412095	RB1452144	1
16	Bracket - Door Pivot L.H.	1412024	ACTIVE	1
17	Shaft - Door Pivot attaching part No.8-32 Self Locking - Black Nut	1412044	RB1472228	1
18	Delivery Door Assembly	1412046	ACTIVE	2
18a	Channel - Door attaching part	1412060	OBS	1
18b	No.8-32 Carriage Nut	1412028	ACTIVE	1
18c	Bumper attaching part No.8-32 x 3/8 THS - Black Screw	1170206	ACTIVE	4
18d	No.8-32 Carriage Nut Actuator - Delivery Door R.H. attaching parts No.8-32 x 3/8 THS - Black Screw	1402052	ACTIVE	4
18e	No.8-32 x 3/8 PHS T/C Screw No.8-32 x Self Locking - Black Nut Actuator - Delivery Door L.H. attaching parts No.8-32 x 3/8 THS - Black Screw	2222109	ACTIVE	3
	No.8-32 Self Locking - Black Nut	9900203	ACTIVE	1
	attaching parts	1452214	ACTIVE	1
	No.8-32 x 3/8 THS - Black Screw	1170206	ACTIVE	2
	No.8-32 Self Locking - Black Nut	1412046	ACTIVE	2
	Actuator - Delivery Door L.H.	1452215	ACTIVE	1
	attaching parts	1170206	ACTIVE	2
	No.8-32 x 3/8 THS - Black Screw	1412046	ACTIVE	2

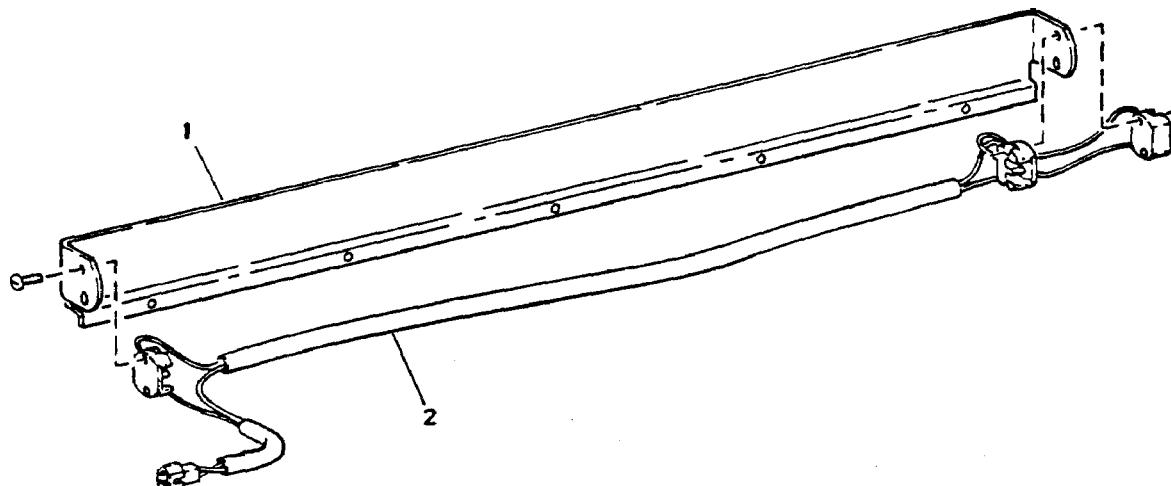**SNACKTRON 1****Figure 4-16 Upper Door Light Assembly**

Index No	Description	Part Number	Note*	No. Req.
1	Upper Door Light Assembly See Figure/Index 4-12/42 for next higher assembly)	1452033	ACTIVE	Ref.
1	Bracket - Light Tube	1452034	RB1572039	1
2	Harness - Fluorescent Light (NOTE: Furnished with (2) #4-36 x 7/16 & (2) #4-36 x 3/4 Mounting Screws)	1452042	ACTIVE	1

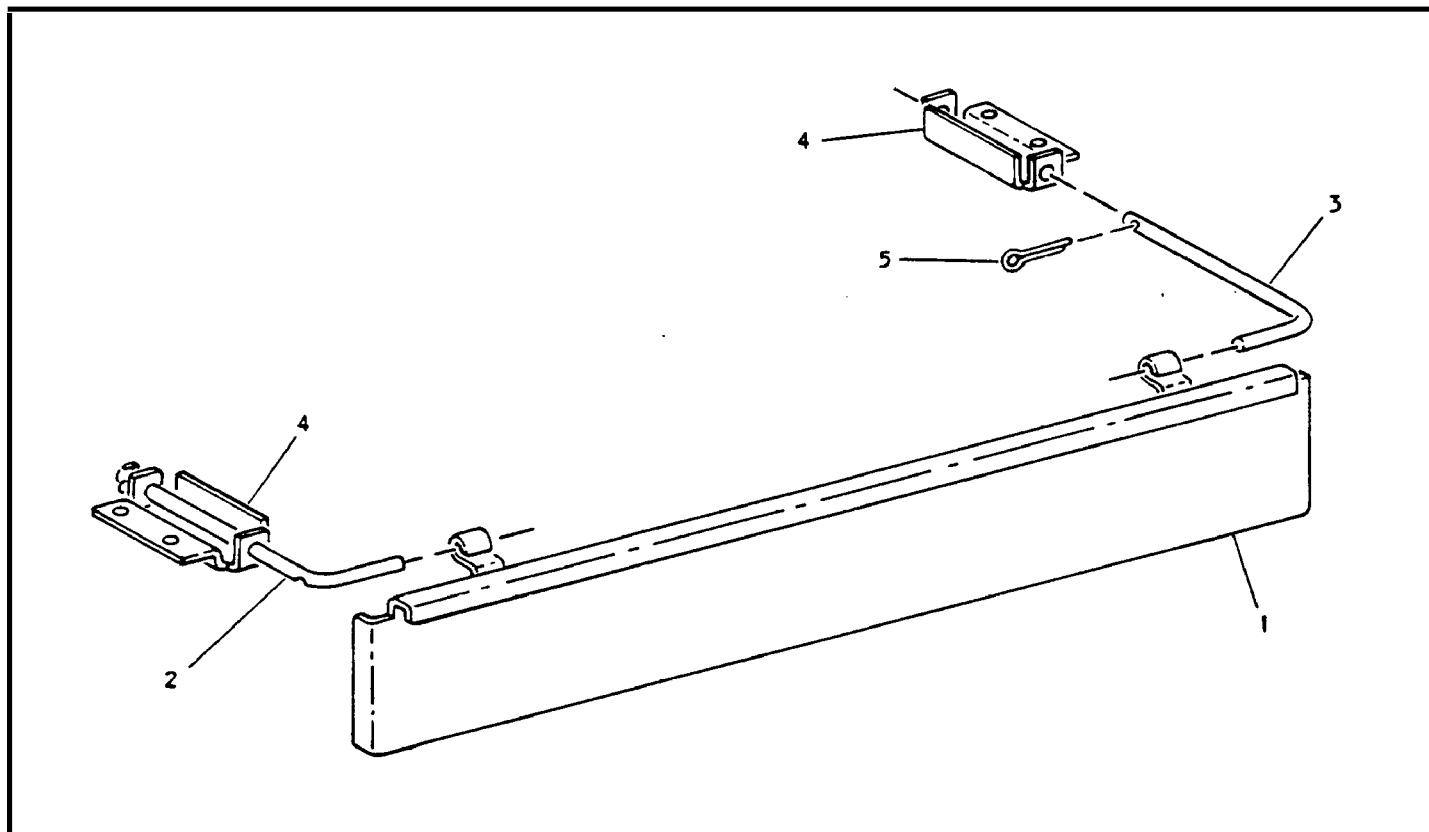


Figure 4-17. Base Plate Assembly

Index No.	Description	Part Number	Note*	Req. No.
	Base Plate Assembly: Nu-Gray :Award (See Figure/Index 4-1/11 for next higher Assembly)	227-1050 227-1051	RB2271407 RB2271407	Ref. Ref.
1	Base Plate Assembly-Hinged: Nu-Gray Award	227-1401 227-1020	RB2271408 RB2271408	1 1
2	L.H. Slide	141-1195	ACTIVE	1
3	R.H. Slide	141-1194	ACTIVE	1
4	Bracket	141-1193	ACTIVE	2
5	3/32 - 3/4 Cotter Pin	9900-098	ACTIVE	2

Notes -

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---