

**ADVANCED PROGRAMMING INSTRUCTIONS**  
Place and leave in machine for reference

CONFIGURE

ADVANCED

PASSWORD:0

Password is 8700

MMC/SD

GROUP. PROD

SET GROUP UPFRT

**01 SELECTION:**  
Scroll up or down to pick a group. (01-99)  
Press "ENTER". Enter selections.  
When done, press "ENTER".

RESET UPFRT

**RESET UPFRT: NO**  
Toggle Yes/No with any button. Press "ENTER"  
This will reset all of the product groups.

LED LIGHTS

PERC. DIMMING

**PER.DIMMING: 0-100**  
0 = LED's completely off 100 = LED's full on

TIME DIMMING

**TIME: XXm:XXs**  
Time is set in minutes & seconds Max time is 30 minutes

AUX LEDS

STEADY

**TIMEOUT: 00s**  
Set time in seconds how long LED's will stay on after vend. Press "ENTER"

FLASHING

**LED ON: 00s**  
Time is set in seconds Press "ENTER"

**LED OFF: 00s**  
Time is set in seconds Press "ENTER"

**TIMEOUT: 00s**  
Set time in seconds how long LED's will flash after vend. Press "ENTER"

DISABLED

**AUX LEDS: OFF**  
Press "ENTER" Aux LED's will be off

SET SINGLE VEND

SINGLE VEND: NO/YES

AUTO DISCOUNT

**DISC:**  
SELECT.; MACHINE; DISABLE; CLEAR

**1st Level % XX**  
(1st discount level) (Max%=50%)

**1st No Sale:XX**  
(How many days of no sales on a selection before 1st level discount applied)

**2nd Level % XX**  
(2nd discount level)(Max%=50%)

**2nd No Sale:XX**  
(How many days of no sales on a selection before 2nd level discount applied)

**Dis. Sel. Sold:XX**  
(How many sales needed on discount selection before changed back to original price)

**Max. Sel Disc:XX**  
(Total number of selections discounted)

**DOORSWT. CLR: NO/YES**  
Press any key to toggle "NO" & "YES", press ENTER to store & return

